TOSHIBA

FILE NO. 050-200315

SERVICE MANUAL

COLOR TELEVISION

27AF43

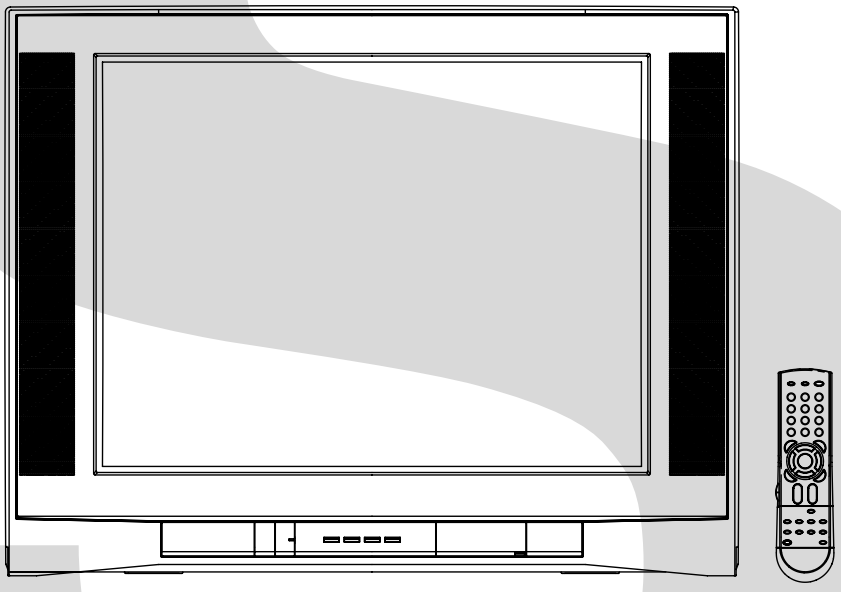

DOCUMENT CREATED IN JAPAN, May, 2003

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.
When replacing an IC's or transistors, use only specified silicon grease (YG6260M).
Remove all old silicon before applying new silicon.

TABLE OF CONTENTS

SERVICING NOTICES ON CHECKING A1-1
HOW TO ORDER PARTS A1-1
IMPORTANT A1-1
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-10
DISASSEMBLY INSTRUCTIONS
1. REMOVAL OF ANODE CAP B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B2-1, B2-2
SERVICE MODE LIST C1-1
CONFIRMATION OF HOURS USED C1-1
WHEN REPLACING EEPROM (MEMORY) IC C1-1
ELECTRICAL ADJUSTMENTS ..... D-1~D-5
BLOCK DIAGRAMS E-1, E-2
PRINTED CIRCUIT BOARDS
MAIN ..... F-1~F-4
CRT/VM COIL F-5
SCHEMATIC DIAGRAMS
MICON G-1, G-2
CHROMA G-3, G-4
DEFLECTION/CRT G-5, G-6
POWER G-7, G-8
SOUND G-9, G-10
TUNER/STEREO G-11, G-12
AV G-13, G-14
COMB FILTER G-15, G-16
CRT/SVM G-17, G-18
WAVEFORMS H-1, H-2
MECHANICAL EXPLODED VIEWS I-1
MECHANICAL REPLACEMENT PARTS LIST J1-1
ELECTRICAL REPLACEMENT PARTS LIST ..... J2-1~J2-5

GENERAL SPECIFICATIONS
(FOR USA)

G-1	**TV System**	CRT	CRT Size / Visual Size	27 inch / 676.6mmV
			CRT Type	Flat
			Deflection	104 degree
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
			Position	Front Side
			Size	1.8 x 3.9 Inch
			Impedance	8 ohm
		Sound Output	MAX	5.0+5.0 W
			10%(Typical)	4.0+4.0 W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	**Tuning System**	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
G-3	**Power**	Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption	at AC	
				135 W at AC 120 V 60 Hz
			Stand by (at AC)	3 W at AC 120 V 60 Hz
			Per Year	-- kWh/Year
		Protector	Power Fuse	Yes
G-4	**Regulation**		Safety	UL/CSA
			Radiation	FCC/IC
			X-Radiation	DHHS/HWC
G-5	**Temperature**		Operation	+5oC ~ +40oC
			Storage	-20oC ~ +60oC
G-6	**Operating Humidity**			Less than 80% RH

GENERAL SPECIFICATIONS
(FOR USA)

G-7	**On Screen Display**	Menu			Yes
			Menu Type		Icon
			Picture		Yes
				Contrast	Yes
				Brightness	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Sound		Yes
				Bass	Yes
				Treble	Yes
				Balance	Yes
				BBE On/Off	Yes
				Stable Sound On/Off	Yes
				Surround On/Off	Yes
			Set Up		Yes
				TV/CATV	Yes
				Auto CH Memory	Yes
				Add/ Delete	Yes
			Option		Yes
				Language	Yes
				CH Label	Yes
				Favorite CH	Yes
				V-Chip	Yes
				Lock	Yes
				On/Off Timer	Yes
				Color Stream DVD/DTV	Yes
			Control Level		Yes
				Volume	Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
				Tuning	No
				Bass	Yes
				Treble	Yes
				Balance	Yes
				Back Light	No
			Stereo,Audio Output,SAP		Yes
			Video		Yes
			Color Stream		Yes
			Channel(TV/Cable)		Yes
			CH Label		Yes
			Game Timer		Yes
			Sleep Timer		Yes
			Sound Mute		Yes
			V-chip Rating		Yes
			16: 9		Yes
G-8	**OSD Language**				English French Spanish
G-9	**Clock and Timer**	Sleep Timer		Max Time	120 Min
				Step	10 Min
		On/Off Timer		Program(On Timer / Off Timer)	Yes
		Wake Up Timer			No
		Timer Back-up (at Power Off Mode)		more than	-- Min Sec

GENERAL SPECIFICATIONS
(FOR USA)

G-10	**Remote Control**	Unit		RC-GF
		Glow in Dark Remocon		Yes
		Format		Toshiba
		Custom Code		TV:40-BFh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		49 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	Yes
			CH Up/+	Yes
			CH Down/-	Yes
			Volume Up/+	Yes
			Volume Down/-	Yes
			C.C.(TV/Caption/Text)	Yes
			CH1/CH2	Yes
			TV/Video(Input Select)	Yes
			CH RTN(Quick View)	Yes
			SLEEP	Yes
			RECALL(Call)	Yes
			Reset	Yes
			Menu/Enter	Yes
			Mute	Yes
			Exit	Yes
			MTS(Audio Select)	Yes
			Fav. Up	Yes
			Fav. Down	Yes
			16: 9	Yes
		Multi Brand Keys	CH Up(VCR)	Yes
			CH Down(VCR)	Yes
			Pause/Still	Yes
			TV/VCR(VCR)	Yes
			FF	Yes
			Rew	Yes
			Rec	Yes
			Play	Yes
			Stop	Yes
			TV	Yes
			VCR	Yes
			Cable	Yes
			DVD	Yes
			CODE	Yes
			DVD MENU <	Yes
			DVD MENU >	Yes
			DVD CLEAR	Yes
			TOP MENU	Yes
			DVD MENU	Yes

GENERAL SPECIFICATIONS
(FOR USA)

G-11	**Features**	Auto Degauss		Yes
		Auto Shut Off		Yes
		Canal+		No
		CATV		Yes
		Anti-theft		No
		Rental		No
		Memory(Last CH)		Yes
		Memory(Last Volume)		Yes
		V-Chip		Yes
			Type	USA,Toshiba Type
		BBE		Yes
		Auto Search		No
		CH Allocation		No
		SAP		Yes
		Just Clock Function		No
		CH Label		Yes
		VM Circuit		Yes
		Full OSD		No
		Premiere		No
		Comb Filter		Yes
				3 Lines
		Auto CH Memory		Yes
		Hotel Lock		No
		Closed Caption		Yes
		Stable Sound		Yes
		FBT Leak Test Protect		Yes
		CH Lock		Yes
		Video Lock		Yes
		Game Timer (Max Time:120 Min)		Yes
		Energy Star		Yes
		Favorite CH		Yes
		Surround		Yes
		16:9 Mode		Yes
G-12	**Accessories**	Owner's Manual	Language	English / French
			W/ Warranty	Yes
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	
			Terminal	
		Loop Antenna		No
			Terminal	-
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Station List		No
		Important Safety Instruction		No
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM-4 x 2
			OEM Brand	No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Registration Card (NDL Card)		Yes
		PTB Sheet		No
		ESP Card		Yes
		300 ohm to 75 ohm Antenna Adapter		No

GENERAL SPECIFICATIONS
(FOR USA)

G-13	**Interface**	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO3	RCA
				Audio Input = VIDEO3	RCA x 2
				Other Terminal	Head Phone
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	RCA
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2
				Euro Scart	No
				Color Stream	RCA x 3
				S Input	Yes
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	**Set Size**			Approx. W x D x H (mm)	740 x 495 x 574.5
G-15	**Weight**			Net (Approx.)	40.0 kg (88.2lbs)
				Gross (Approx.)	46.5 kg (102.5lbs)
G-16	**Carton**		Master Carton		No
				Content	---- Sets
				Material	-- /--
				Dimensions W x D x H(mm)	-- x -- x --
				Description of Origin	No
			Gift Box		Yes
				Material	Double/Brown
				Dimensions W x D x H(mm)	850 x 620 x 665
				Design	As per Buyer's
				Description of Origin	Yes
			Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	31
			Container Stuffing		156 Sets/40' container
G-17	**Cabinet Material**		Cabinet	Cabinet Front	PS 94V0 DECABROM
				Cabinet Rear	PS 94V0 DECABROM
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes

GENERAL SPECIFICATIONS
(FOR CANADA)

G-1	**TV System**	CRT	CRT Size / Visual Size	27 inch / 676.6mmV
			CRT Type	Flat
			Deflection	104 degree
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
			Position	Front Side
			Size	1.8 x 3.9 Inch
			Impedance	8 ohm
		Sound Output	MAX	5.0+5.0 W
			10%(Typical)	4.0+4.0 W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	**Tuning System**	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
G-3	**Power**	Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption	at AC	
				135 W at AC 120 V 60 Hz
			Stand by (at AC)	3 W at AC 120 V 60 Hz
			Per Year	-- kWh/Year
		Protector	Power Fuse	Yes
G-4	**Regulation**		Safety	UL/CSA
			Radiation	FCC/IC
			X-Radiation	DHHS/HWC
G-5	**Temperature**		Operation	+5oC ~ +40oC
			Storage	-20oC ~ +60oC
G-6	**Operating Humidity**			Less than 80% RH

GENERAL SPECIFICATIONS
(FOR CANADA)

G-7	**On Screen Display**	Menu			Yes
			Menu Type		Icon
			Picture		Yes
				Contrast	Yes
				Brightness	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Sound		Yes
				Bass	Yes
				Treble	Yes
				Balance	Yes
				BBE On/Off	Yes
				Stable Sound On/Off	Yes
				Surround On/Off	Yes
			Set Up		Yes
				TV/CATV	Yes
				Auto CH Memory	Yes
				Add/ Delete	Yes
			Option		Yes
				Language	Yes
				CH Label	Yes
				Favorite CH	Yes
				V-Chip	Yes
				Lock	Yes
				On/Off Timer	Yes
				Color Stream DVD/DTV	Yes
			Control Level		Yes
				Volume	Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
				Tuning	No
				Bass	Yes
				Treble	Yes
				Balance	Yes
				Back Light	No
			Stereo,Audio Output,SAP		Yes
			Video		Yes
			Color Stream		Yes
			Channel(TV/Cable)		Yes
			CH Label		Yes
			Game Timer		Yes
			Sleep Timer		Yes
			Sound Mute		Yes
			V-chip Rating		Yes
			16: 9		Yes
G-8	**OSD Language**				English French Spanish
G-9	**Clock and Timer**	Sleep Timer		Max Time	120 Min
				Step	10 Min
		On/Off Timer		Program(On Timer / Off Timer)	Yes
		Wake Up Timer			No
		Timer Back-up (at Power Off Mode)		more than	-- Min Sec

GENERAL SPECIFICATIONS
(FOR CANADA)

G-10	**Remote Control**	Unit		RC-GF
		Glow in Dark Remocon		Yes
		Format		Toshiba
		Custom Code		TV:40-BFh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		49 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	Yes
			CH Up/+	Yes
			CH Down/-	Yes
			Volume Up/+	Yes
			Volume Down/-	Yes
			C.C.(TV/Caption/Text)	Yes
			CH1/CH2	Yes
			TV/Video(Input Select)	Yes
			CH RTN(Quick View)	Yes
			SLEEP	Yes
			RECALL(Call)	Yes
			Reset	Yes
			Menu/Enter	Yes
			Mute	Yes
			Exit	Yes
			MTS(Audio Select)	Yes
			Fav. Up	Yes
			Fav. Down	Yes
			16: 9	Yes
		Multi Brand Keys	CH Up(VCR)	Yes
			CH Down(VCR)	Yes
			Pause/Still	Yes
			TV/VCR(VCR)	Yes
			FF	Yes
			Rew	Yes
			Rec	Yes
			Play	Yes
			Stop	Yes
			TV	Yes
			VCR	Yes
			Cable	Yes
			DVD	Yes
			CODE	Yes
			DVD MENU <	Yes
			DVD MENU >	Yes
			DVD CLEAR	Yes
			TOP MENU	Yes
			DVD MENU	Yes

GENERAL SPECIFICATIONS
(FOR CANADA)

G-11	**Features**	Auto Degauss		Yes
		Auto Shut Off		Yes
		Canal+		No
		CATV		Yes
		Anti-theft		No
		Rental		No
		Memory(Last CH)		Yes
		Memory(Last Volume)		Yes
		V-Chip		Yes
			Type	USA,Toshiba Type
		BBE		Yes
		Auto Search		No
		CH Allocation		No
		SAP		Yes
		Just Clock Function		No
		CH Label		Yes
		VM Circuit		Yes
		Full OSD		No
		Premiere		No
		Comb Filter		Yes
				3 Lines
		Auto CH Memory		Yes
		Hotel Lock		No
		Closed Caption		Yes
		Stable Sound		Yes
		FBT Leak Test Protect		Yes
		CH Lock		Yes
		Video Lock		Yes
		Game Timer (Max Time:120 Min)		Yes
		Energy Star		Yes
		Favorite CH		Yes
		Surround		Yes
		16:9 Mode		Yes
G-12	**Accessories**	Owner's Manual	Language	English / French
			W/ Warranty	Yes
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	
			Terminal	
		Loop Antenna		No
			Terminal	-
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Station List		No
		Important Safety Instruction		No
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM-4 x 2
			OEM Brand	No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Registration Card (NDL Card)		Yes
		PTB Sheet		No
		ESP Card		Yes
		300 ohm to 75 ohm Antenna Adapter		No

GENERAL SPECIFICATIONS
(FOR CANADA)

G-13	**Interface**	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO3	RCA
				Audio Input = VIDEO3	RCA x 2
				Other Terminal	Head Phone
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	RCA
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2
				Euro Scart	No
				Color Stream	RCA x 3
				S Input	Yes
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	**Set Size**			Approx. W x D x H (mm)	740 x 495 x 574.5
G-15	**Weight**			Net (Approx.)	40.0 kg (88.2lbs)
				Gross (Approx.)	46.5 kg (102.5lbs)
G-16	**Carton**		Master Carton		No
				Content	---- Sets
				Material	-- /--
				Dimensions W x D x H(mm)	-- x -- x --
				Description of Origin	No
			Gift Box		Yes
				Material	Double/Brown
				Dimensions W x D x H(mm)	850 x 580 x 665
				Design	As per Buyer's
				Description of Origin	Yes
			Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	31
			Container Stuffing		162 Sets/40' container
G-17	**Cabinet Material**		Cabinet	Cabinet Front	PS 94V0 DECABROM
				Cabinet Rear	PS 94V0 DECABROM
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

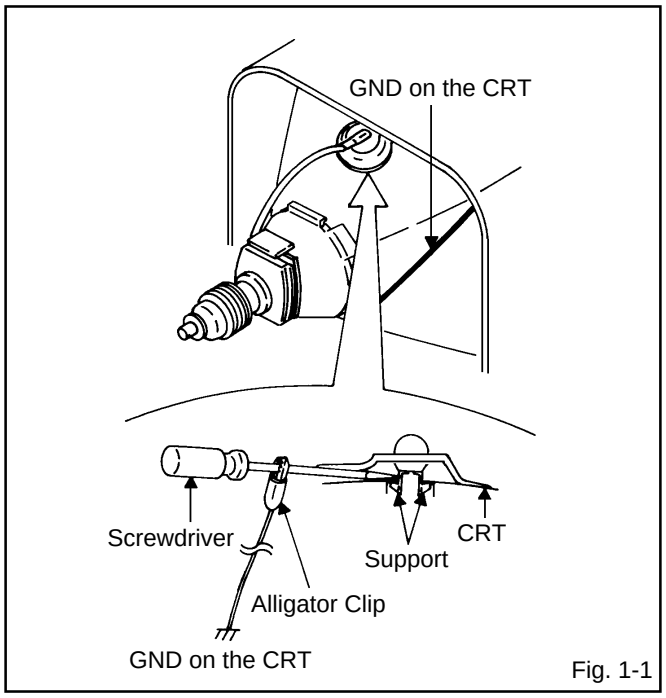

Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

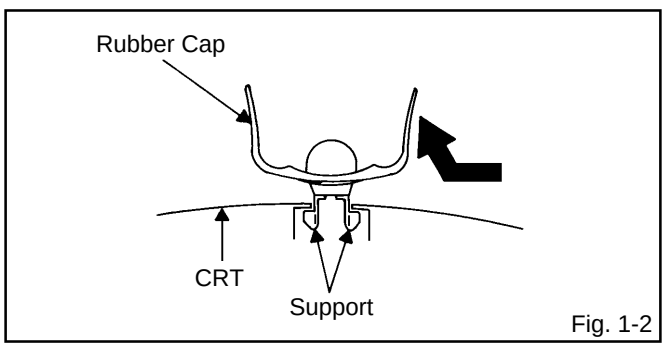

Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

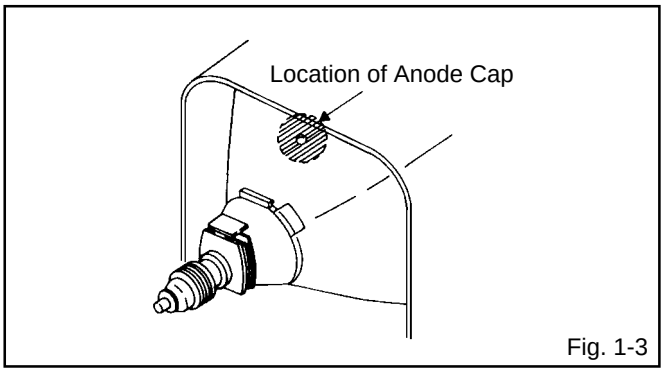

Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

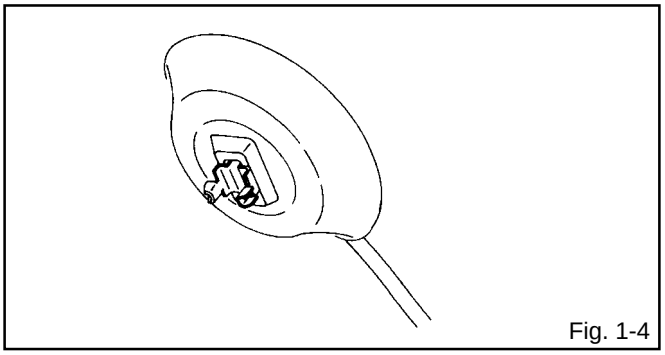
Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5**.

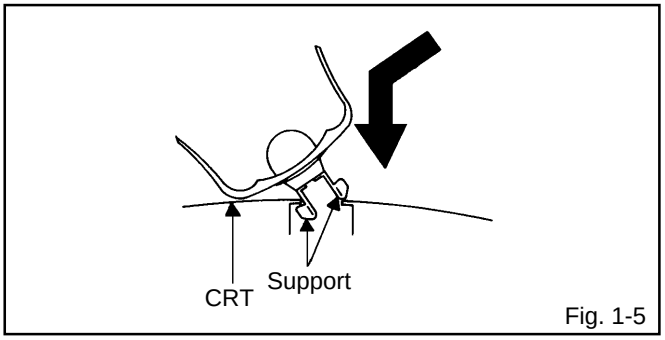

Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 2-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

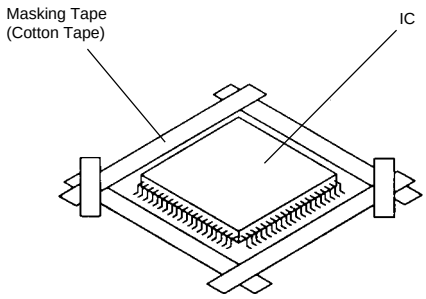

Fig. 2-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 2-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

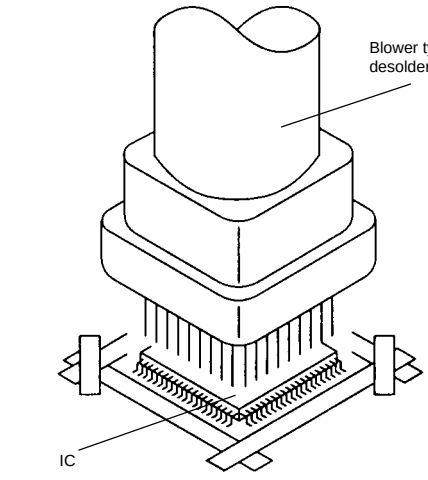

Fig. 2-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 2-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

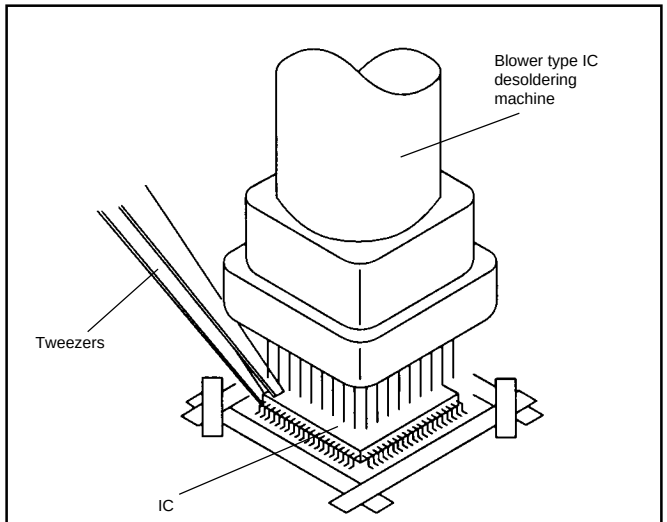

Fig. 2-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 2-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

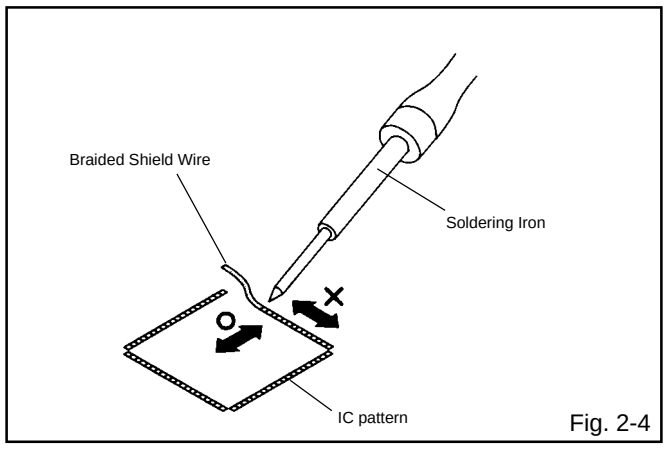

Fig. 2-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 2-5.)**

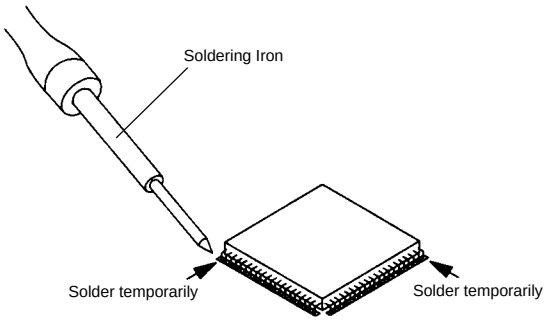

Fig. 2-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 2-6.)**

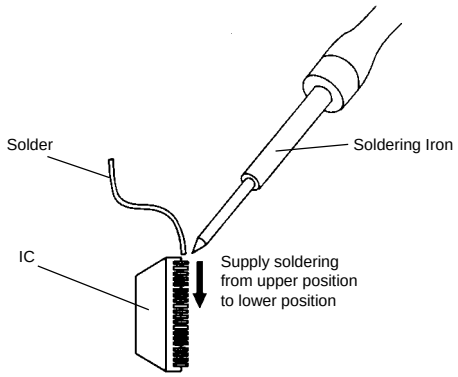

Fig. 2-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

   NOTE

   Do not absorb the solder to excess.

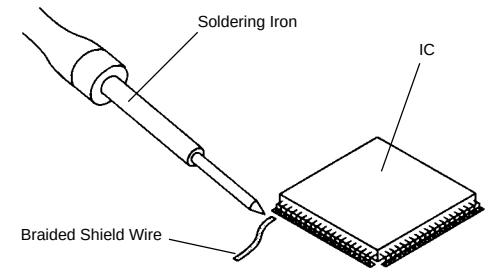

Fig. 2-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

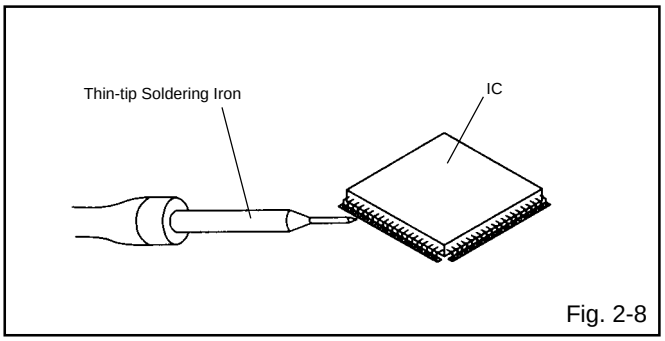

Fig. 2-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD and LOCK PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

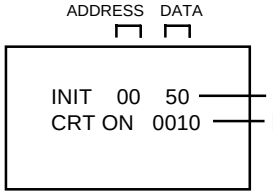

Initial setting content of MEMORY IC.
POWER ON total hours.
= (16 x 16 x 16 x thousands digit value)
+ (16 x 16 x hundreds digit value)
+ (16 x tens digit value)
+ (ones digit value)

FIG. 1

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 1F due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	E8	0A	64	5E	B3	24	B7	3D	AC	AA	04	40	40	40	7F
10	50	00	00	00	00	00	06	00	3F	0F	0D	C1	A8	21	43	00

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. **After the data input, set to the initializing of shipping.**
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

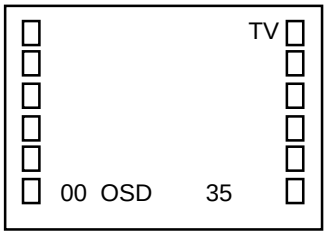

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	19	CONTRAST CENT
01	CUT OFF	20	CONTRAST MIN
02	H. VCO	21	COLOR MAX
03	H. PHASE	22	COLOR CENTER
04	AFC GAIN	23	COLOR MIN
05	V. SHIFT	24	TINT
06	H. SIZE	25	SHARPNESS
07	V. SIZE	26	Cb DELAY FINE
08	V. LINEARITY	27	Cr DELAY FINE
09	VS CORRECTION	28	Cb PEDESTAL ADJ
10	DRIVE R	29	Cr PEDESTAL ADJ
11	DRIVE B	30	E/W PARABOLA
12	R CUT OFF	31	E/W CORNER
13	G CUT OFF	32	E/W TRAPEZIUM
14	B CUT OFF	33	LEVEL
15	BRIGHT MAX	34	SEPARATION1
16	BRIGHT CENT	35	SEPARATION2
17	BRIGHT MIN	88	READ DATA
18	CONTRAST MAX		

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Set condition is AV MODE without signal.
3. Connect the digital voltmeter to the **TP003**.
4. Adjust the **VR502** until the digital voltmeter is 135 ± 0.5V.

2-2: CUT OFF

1. Place the set with Aging Test for more than 15 minutes.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
3. Adjust the **Screen Volume** until a dim raster is obtained.

2-3: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(12)** on the remote control to select “R. BIAS”.
5. Press the CH. UP/DOWN button on the remote control to select the “R. BIAS”, “G. BIAS”, “B. BIAS”, “B. DRIVE” or “G. DRIVE”.
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, B. DRIVE, and G. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-5: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select “H. PHAS”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

ELECTRICAL ADJUSTMENTS

2-6: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select “H. SIZE”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 10%.

2-7: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-8: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select “V. SIZE”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes 9 ± 2%.

2-9: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-8. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select “V. LIN”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-10: LEVEL

1. Receive the VHF HIGH (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is 75 ± 2mV.

2-11: PARABOLA

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select “PARABOLA”.
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

2-12: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select “TRAPEZIUM”.
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

2-13: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select “SEP 1”.
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch =Non input and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select “SEP 1”.
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **Audio Out Jack (L-ch)**.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(35)** on the remote control to select “SEP 2”.
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum.

ELECTRICAL ADJUSTMENTS

2-14: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 0% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes “90”.

2-15: TINT/COLOR CENT

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP806**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line **(Refer to Fig. 2-1)**
5. Connect the oscilloscope to **TP804**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 125 ± 10% of the white level. **(Refer to Fig. 2-2)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7.
10. Press the TV/VIDEO button on the remote control to set to the CS mode.
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

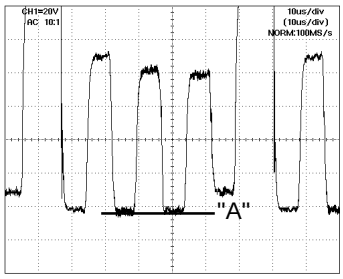

Fig. 2-1

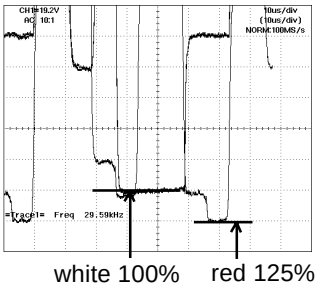

Fig. 2-2

2-16: CONTRAST MAX MANUAL

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select “CONT. MAX”.
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes “100”.
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.
5. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 1~3.

2-17: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-3)**

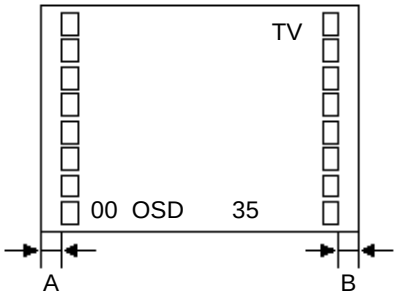

Fig. 2-3

2-18: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below. (RF/AV/CS)

NO.	FUNCTION	STEP NO.	NO.	FUNCTION	STEP NO.
02	H.VCO	03	21	COL.MAX	90
04	AFC GAIN	06	23	COL.MIN	00
05	V.SHIFT	02	25	SHARPNESS	40
09	VS.CORRECTION	38	26	CB DL	00
15	BRI.MAX	150	27	CR DL	00
17	BRI.MIN	50	28	CB PED	08
19	CONT.CENT	64	29	CR PED	08
20	CONT.MIN	16	31	CORNER	33

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

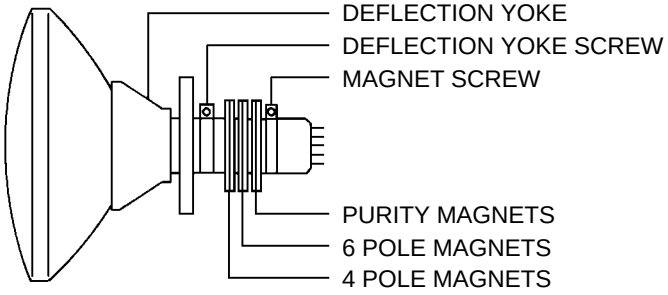

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

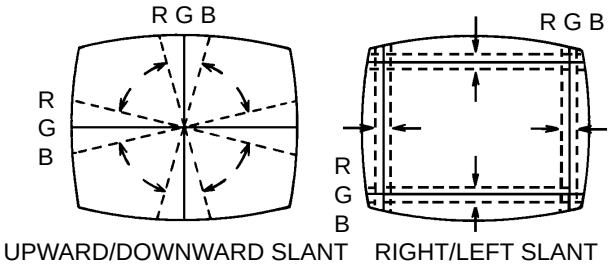

Fig. 3-2-a

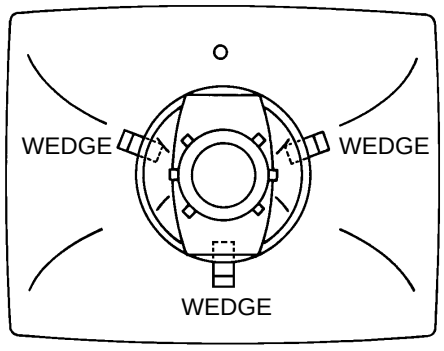

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

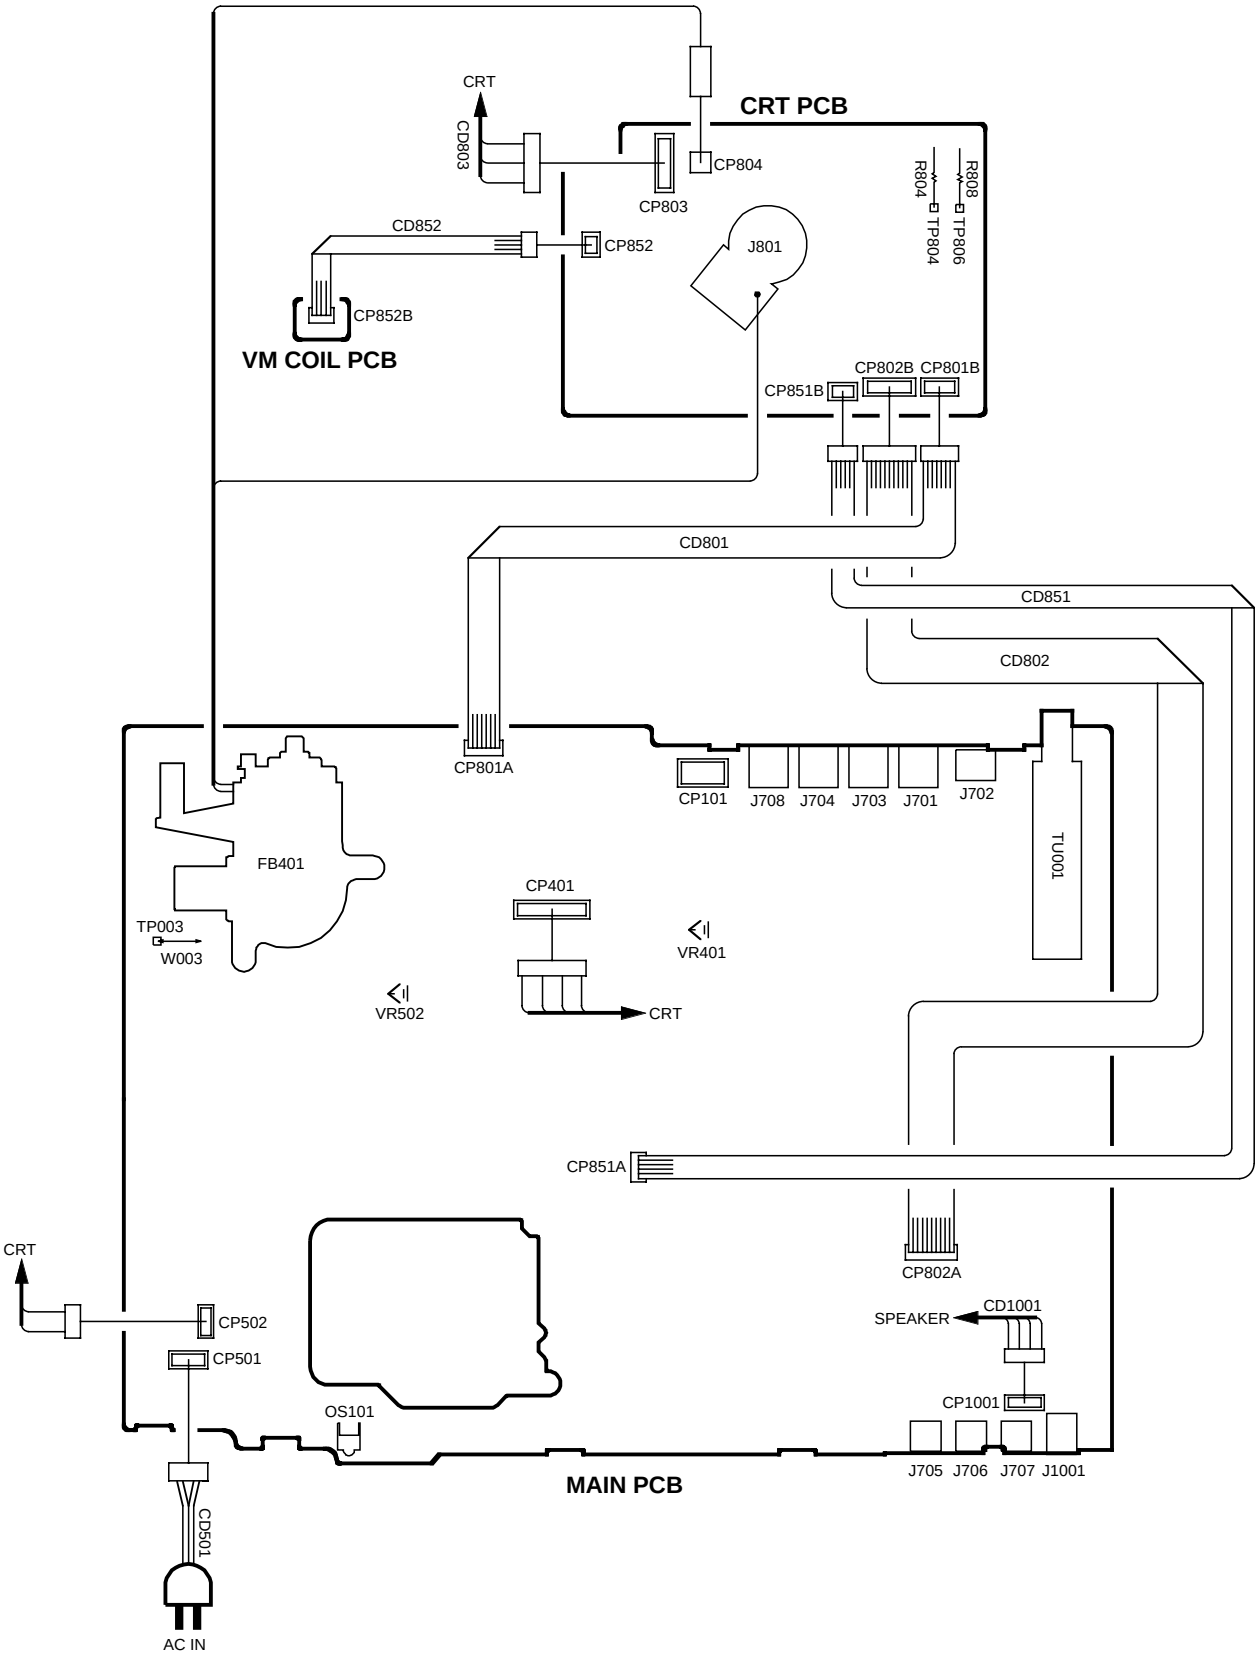

BLOCK DIAGRAM

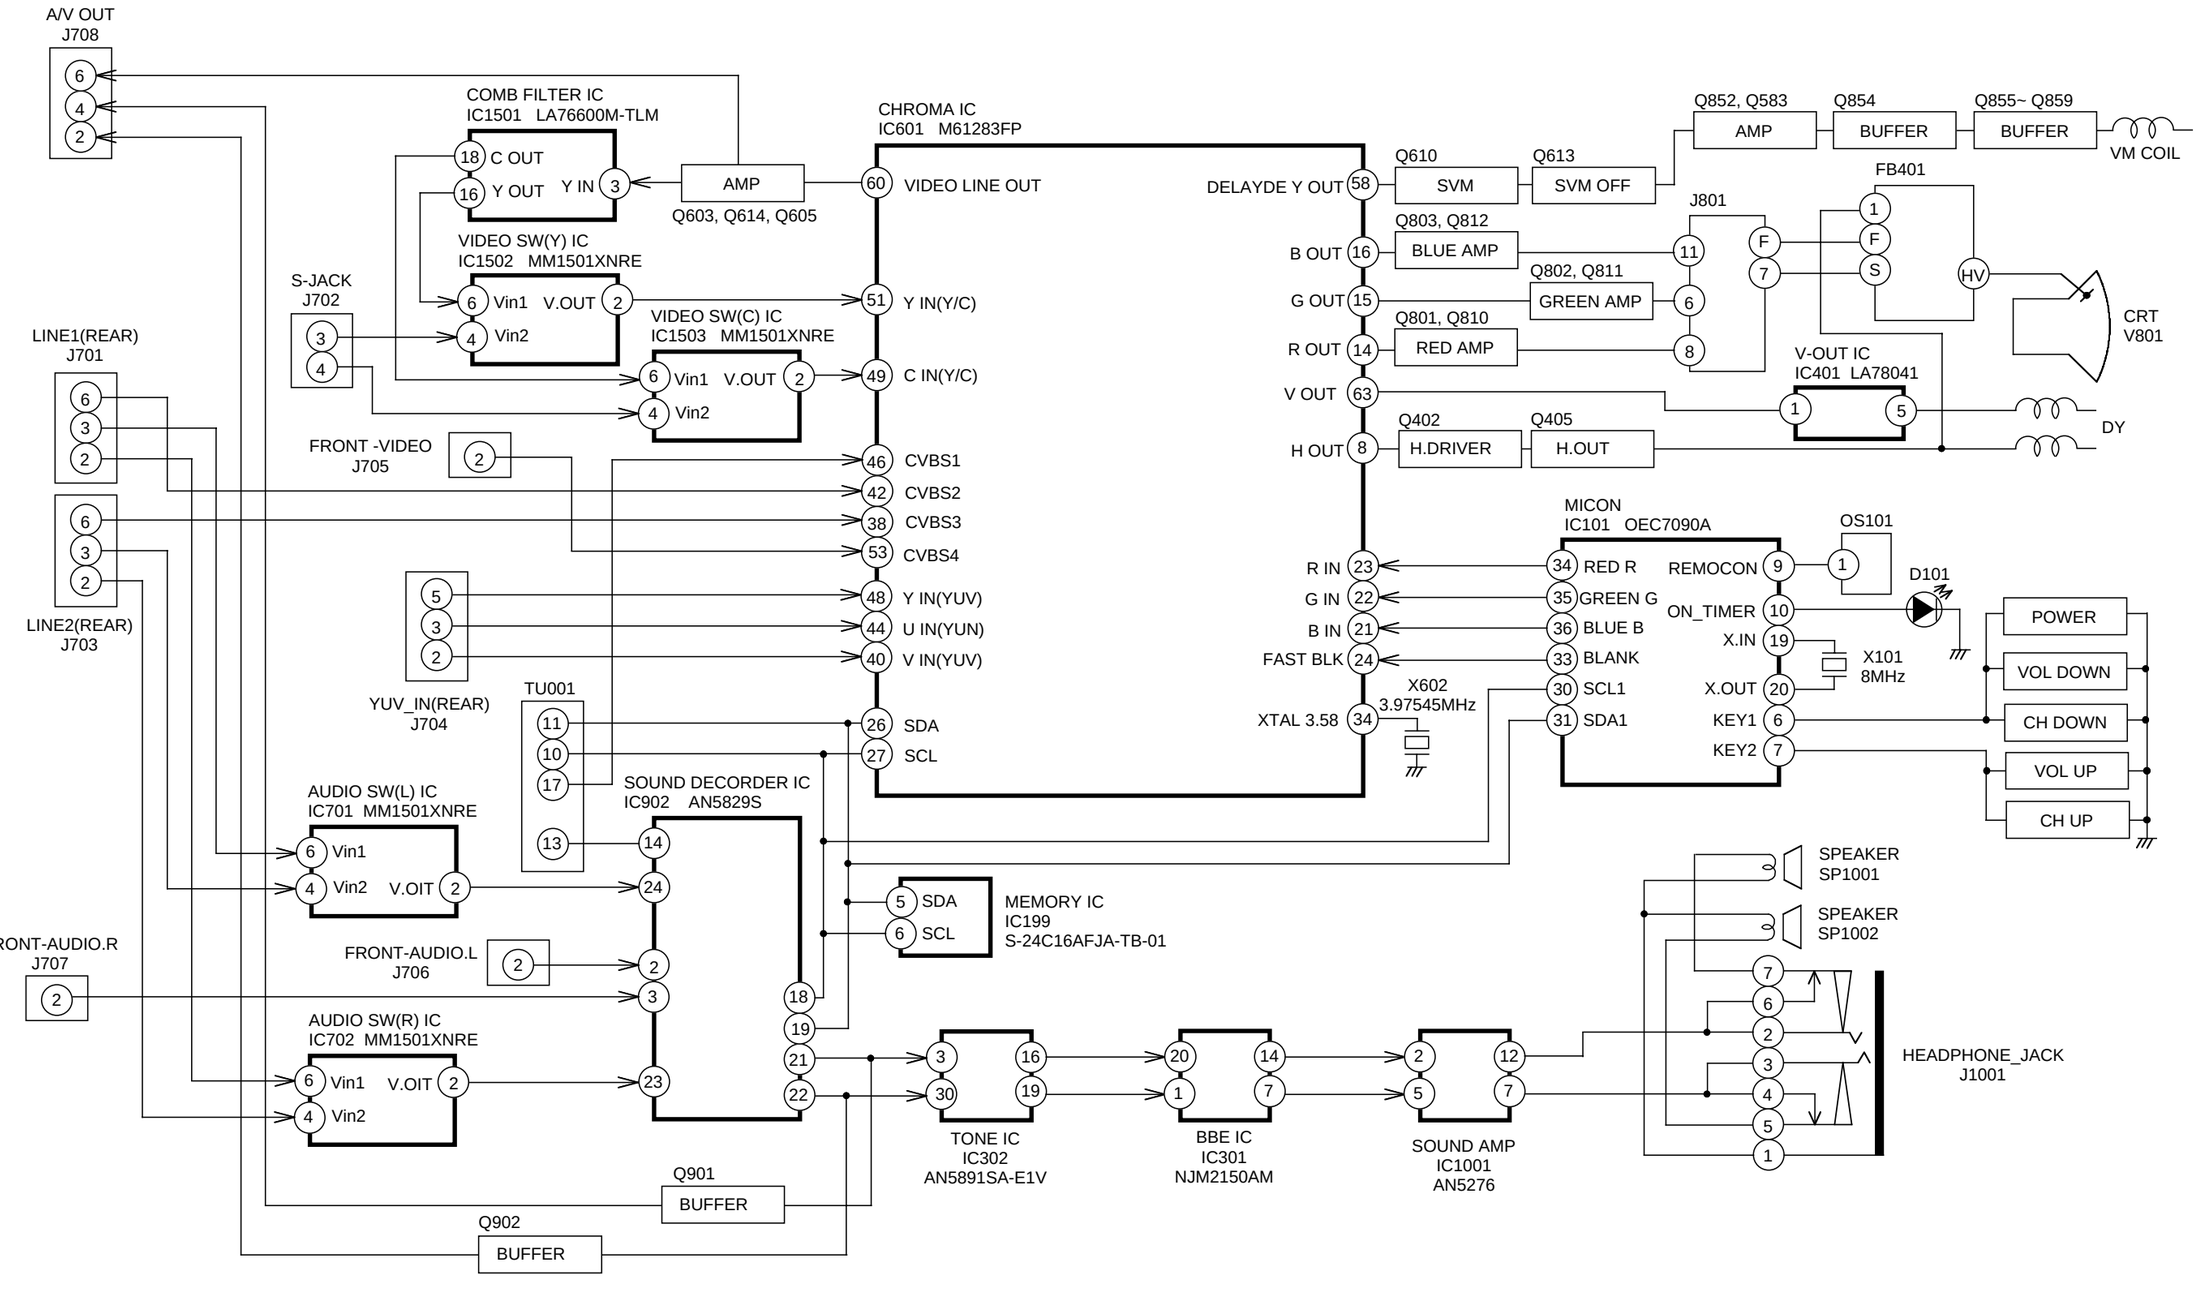

PRINTED CIRCUIT BOARDS
MAIN (INSERTED PARTS)
SOLDER SIDE

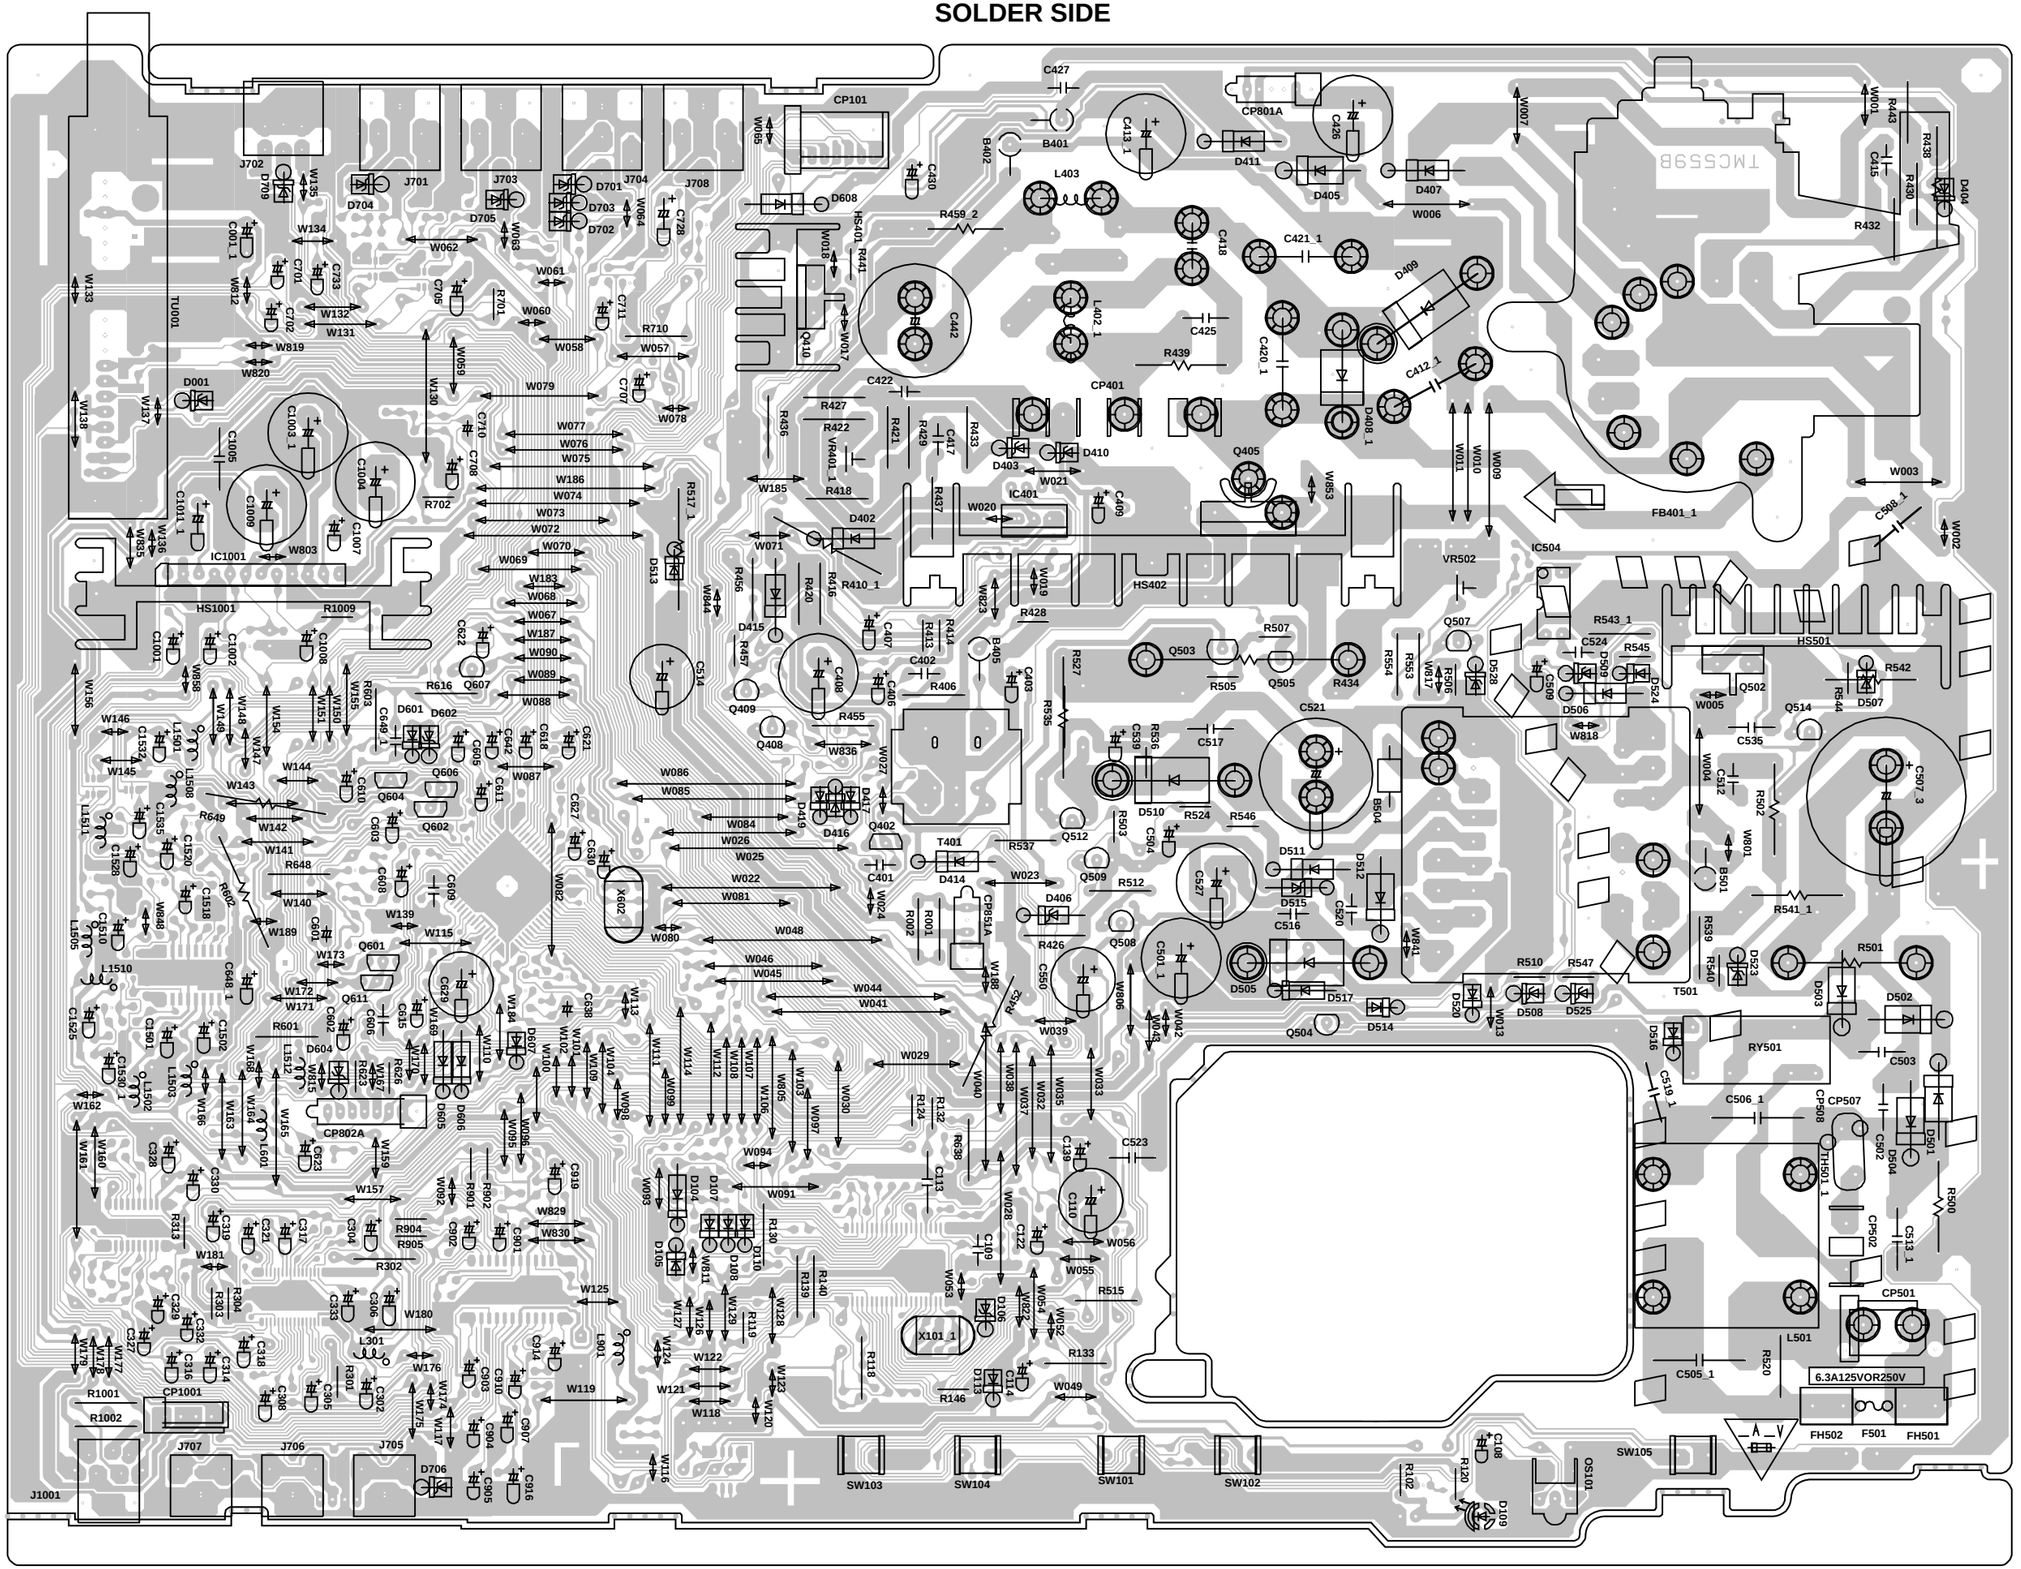

PRINTED CIRCUIT BOARDS
MAIN (CHIP MOUNTED PARTS)
SOLDER SIDE

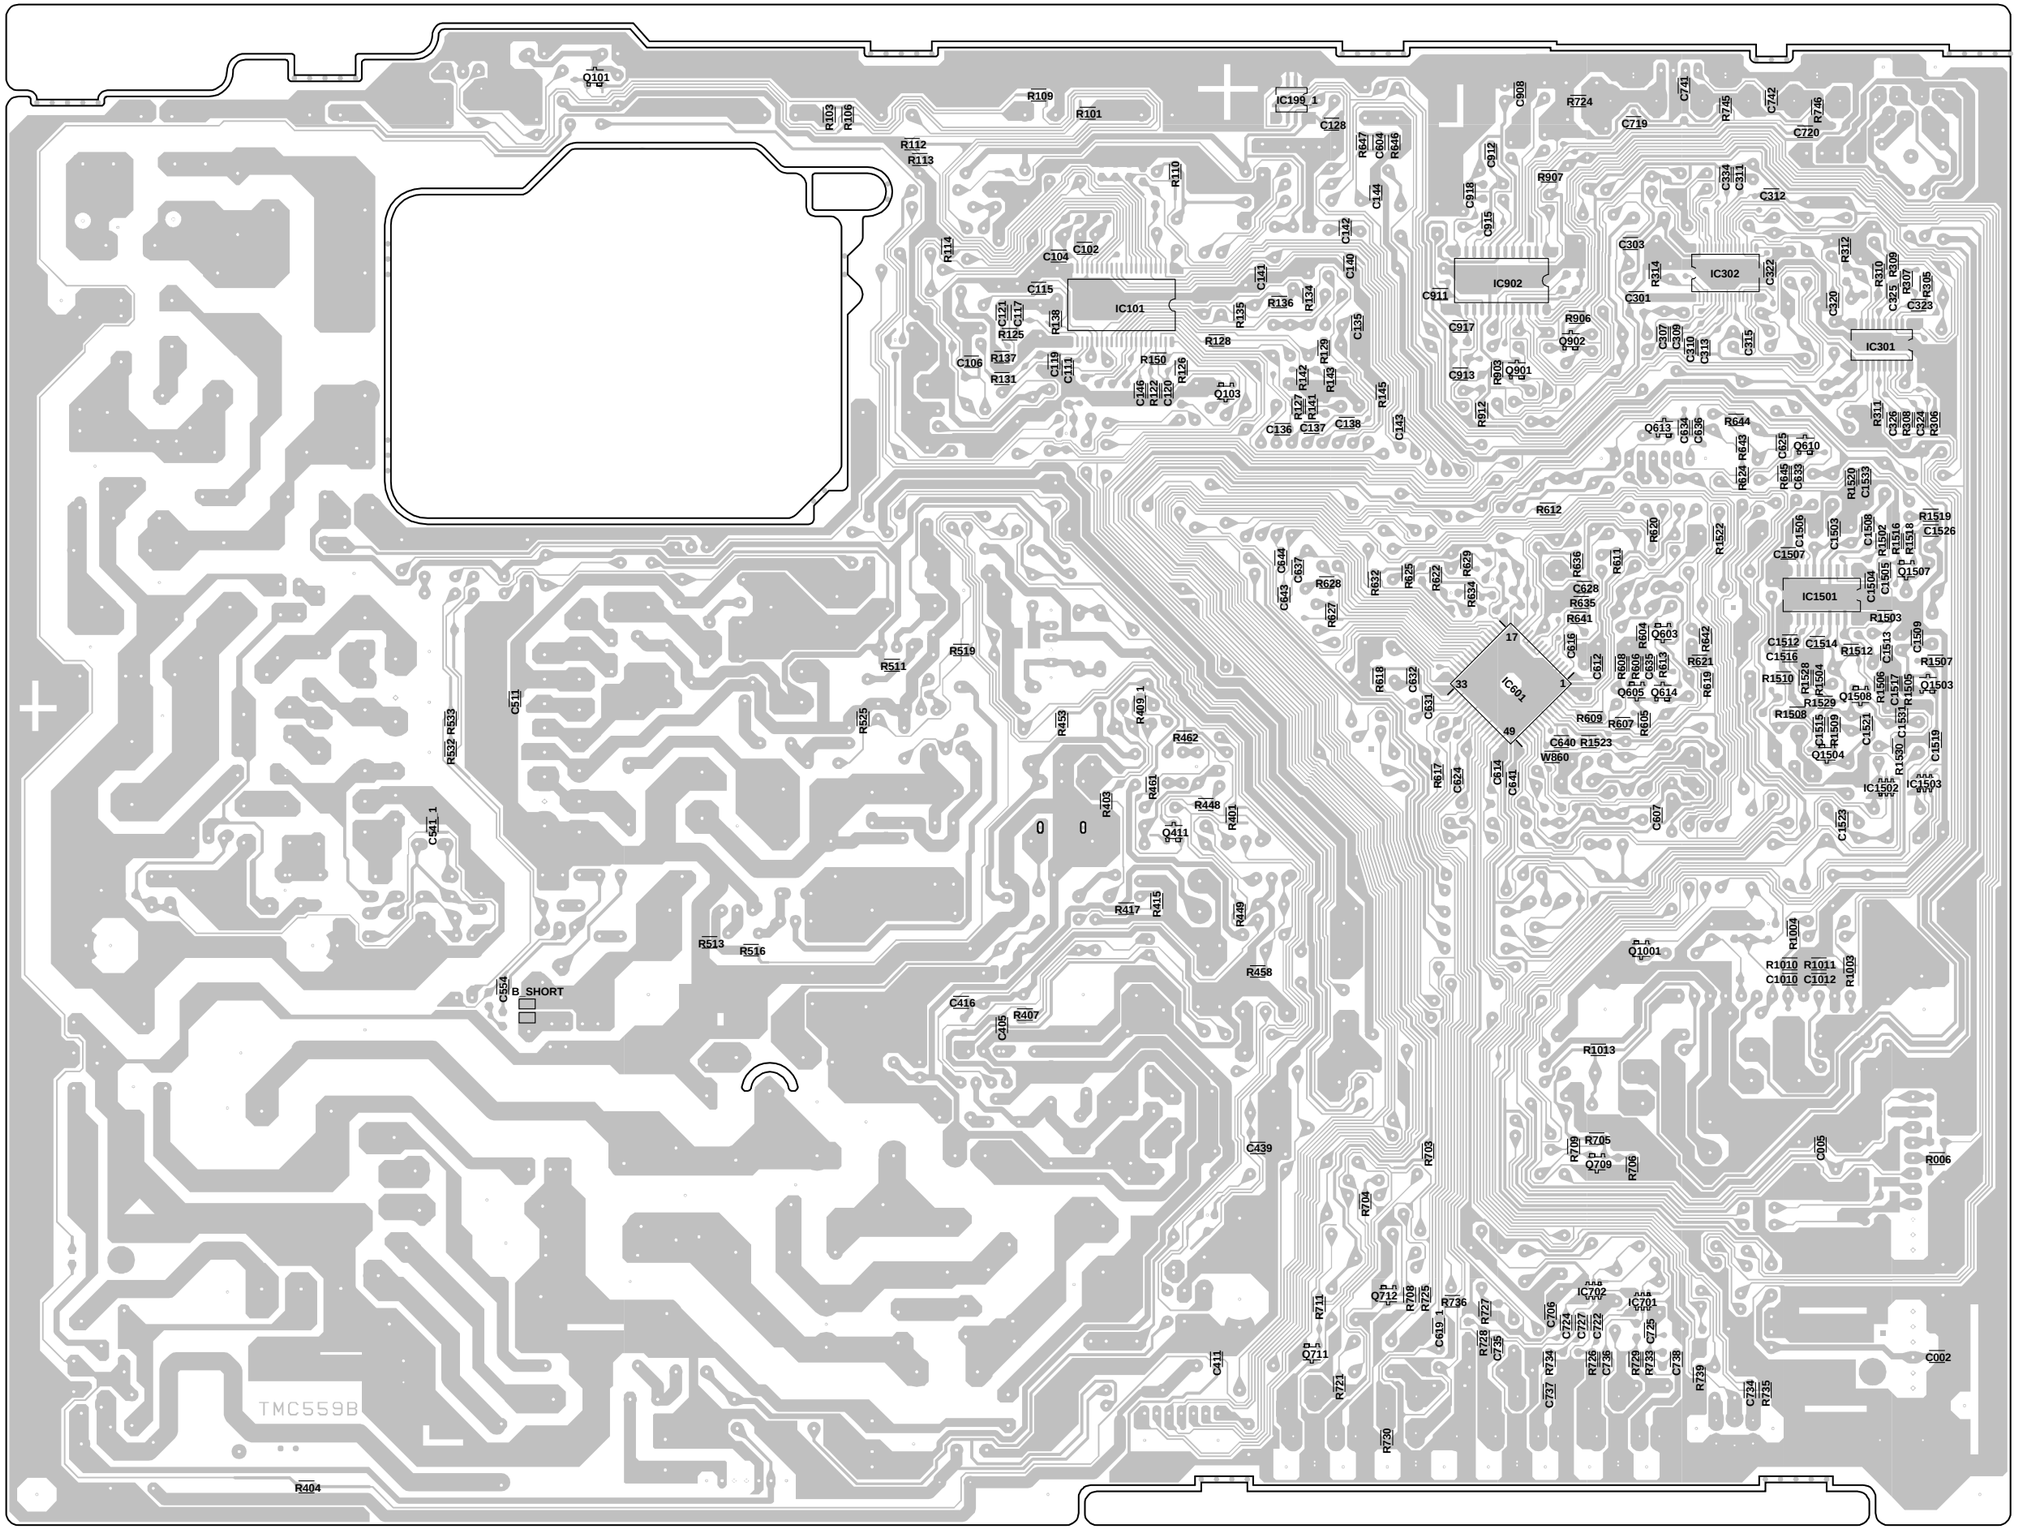

PRINTED CIRCUIT BOARDS
CRT/VM COIL
SOLDER SIDE

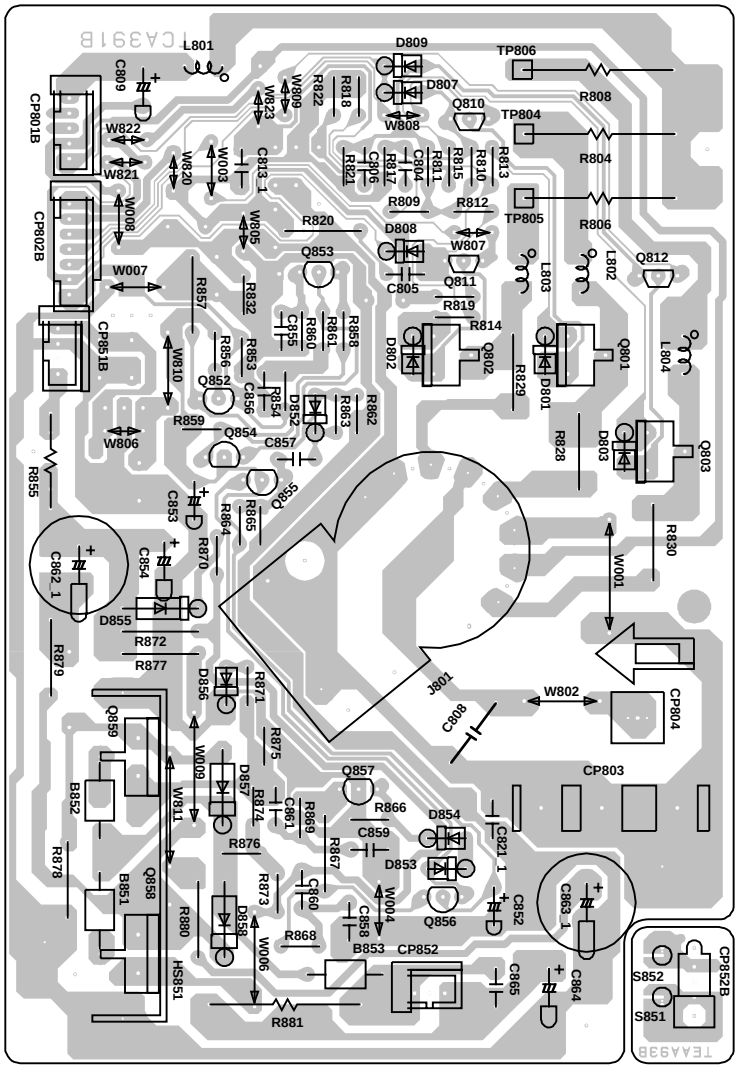

MICON SCHEMATIC DIAGRAM
(MAIN PCB)

ACCESSORY
BT001 R03(AB)E_2P_G
BT002 R03(AB)E_2P_G
TM101 R25-1911

POWER ON D109 SLR-342/C/T32
R102 270 1/4W
LED SW Q101 KTC3875S_Y_RTK
R109 1K
OS101 RPM7138-H5
B+ Vout GND
R120 47 1/4W
C108 16V 10 KA

R101 560
R103 2.7K
R106 560
CH UP SW101 EVQ21505R
VOL UP SW103 EVQ21505R
CH DOWN SW102 EVQ21505R
VOL DOWN SW104 EVQ21505R
POWER SW105 EVQ21505R

MICON IC IC101 OEC7090A
R146 100 1/4W
C142 220P CH
C143 220P CH
R118 2.2K 1/4W
R110 10K
R112 2.2K
R113 2.2K
R114 47K
R119 22K 1/4W
C139 16V 10 KA
C140 220P CH
C141 220P CH
C106 0.1 B
D106 MTZJ5.1B
C102 27P CH
C104 27P CH
X101_1 100CT8R005 8MHz

1 AUDIO MUTE
2 EXT MUTE
3 VOLUME
4 BBE SW
5 AFT
6 KEY 1
7 KEY 2
8 X RAY
9 REMOCON
10 ON_TIMER
11 S_IN
12 Y/C_SW
13 AUDIO_SW
14 NC
15 P FAIL
16 DEGAUSS H
17 X-RAY TEST
18 CNVSS
19 X.IN
20 X.OUT
21 VSS

42 H_CTL
41 PROTECT
40 12C_OFF
39 SYNC
38 H SYNC
37 V SYNC
36 BLUE B
35 GREEN G
34 RED R
33 BLANK
32 CLOCK_CNT
31 SDA1
30 SCL1
29 POWER
28 MCU_CLOCK
27 RESET
26 CVIN
25 VHOLD
24 HLF
23 FILT
22 VCC

R124 1K 1/4W
R130 47K 1/4W
R126 100
C120 0.001 B
C146 330P CH
C144 270P CH
C136 0.1 B
C137 0.1 B
C138 0.1 B
D110 1SS133
D108 1SS133
D107 1SS133
D104 1SS133
D105 1SS133
W811
R127 3.9K
R128 3.9K
R129 3.9K
R141 680
R142 680
R143 680
R145 2.2K
C135 10P CH
R139 100 1/4W
R140 100 1/4W
R135 4.7K
R136 4.7K
R134 10K
R150 1K
R122 1K
CLAMP SW Q103 KTC3875S_Y_RTK
C115 820P CH
C113 0.1 B
R138 1M
R132 100 1/4W
C111 0.001 B
R131 1K
C122 50V 1 KA
C119 220P CH
R125 10
C117 47P CH
C121 0.01 B
R133 1K 1/4W
C109 0.1 B
C110 6.3V 2200 YK
R137 10K
C114 50V 0.47 KA
D113 MTZJ5.6B
C128 0.1 F
W822
MEMORY IC IC199_1 S-24C16AFJA-TB-01
SDA SCL MODE VCC VSS E2 E1 E0

TEST POINT CP101 173979-7
GND 1
I2C_SCL 2
I2C_SDA 3
I2C_OFF 4
GND 5
AUDIO L 6
AUDIO R 7

FROM/TO CHROMA
AT+5V
PROTECT
CLAMP_OFF
SYNC_OUT
HD
VD
OSD_Y
OSD_B
OSD_G
OSD_R
OSD_BLK
SW_Y_OUT
RESET
POWER
SDA
SCL

FROM/TO TUNER/STEREO
J_AUDIO_OUT_R
J_AUDIO_OUT_L
SDA
SCL

FROM/TO SOUND
SDA
SCL

TO SOUND
TV_MUTE
BBE_SW

FROM TUNER/STEREO
AFT

FROM/TO AV
EXT_MUTE
S_IN
AUDIO_SW

FROM/TO DEFLECTION
H_CTL
X-RAY

FROM/TO POWER
X-RAY
P.FAIL
DEGAUSS_H
GND
POWER

TO COMB FILTER
Y/C_SW

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

PCB010
TMC559

CHROMA SCHEMATIC DIAGRAM
(MAIN PCB)

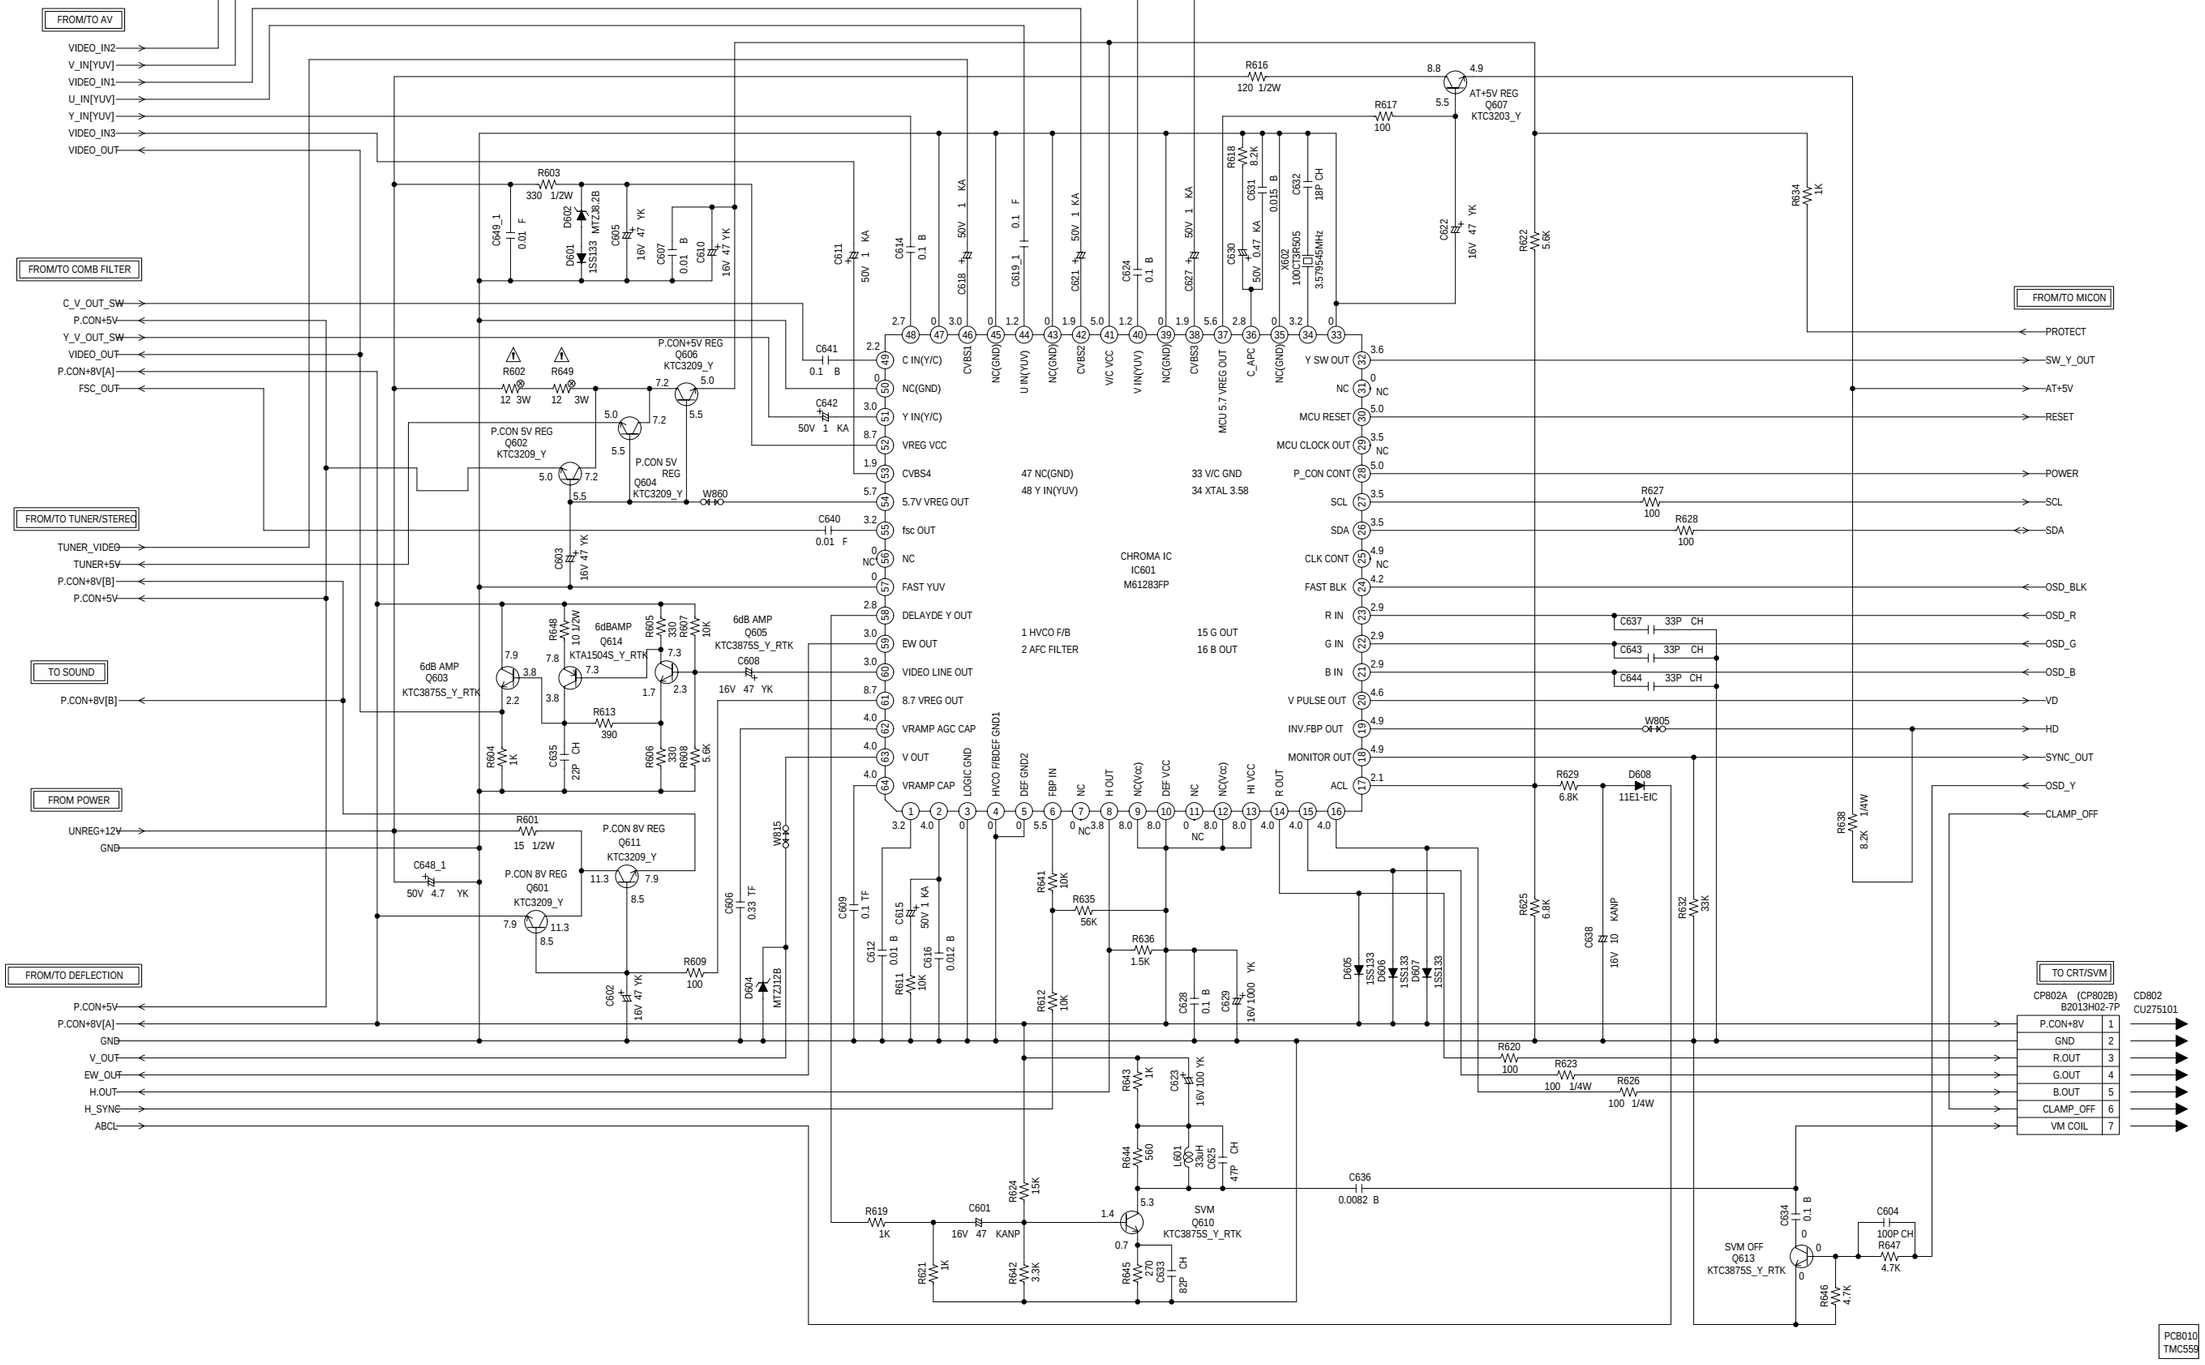

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

DEFLECTION SCHEMATIC DIAGRAM
(MAIN PCB)

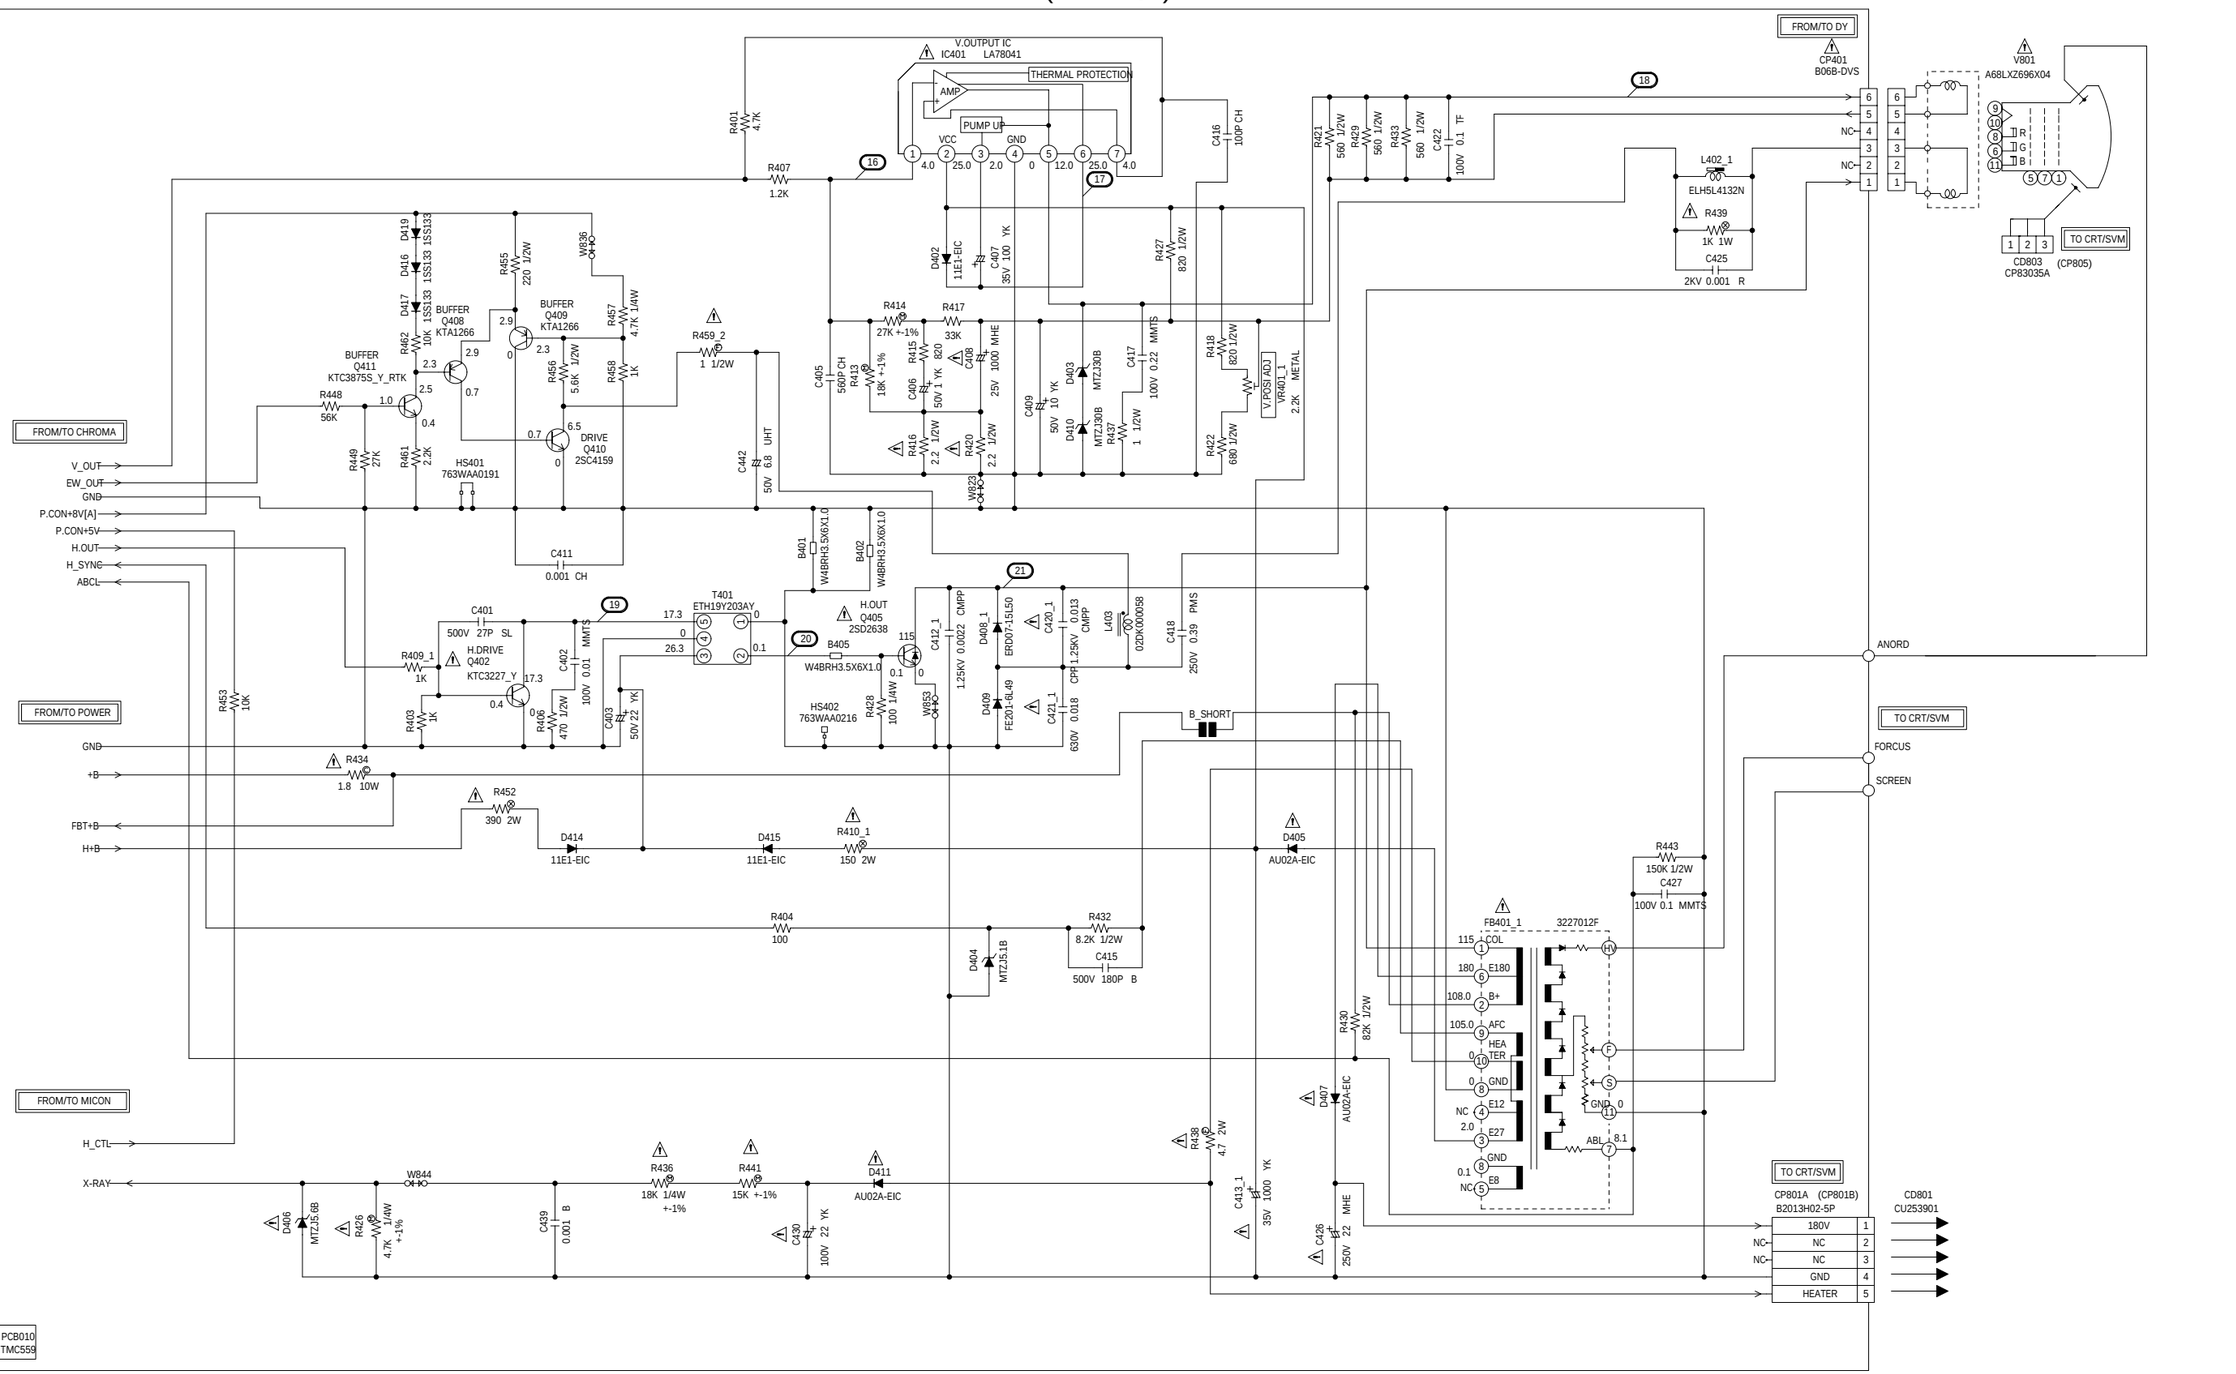

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

POWER SCHEMATIC DIAGRAM
(MAIN PCB)

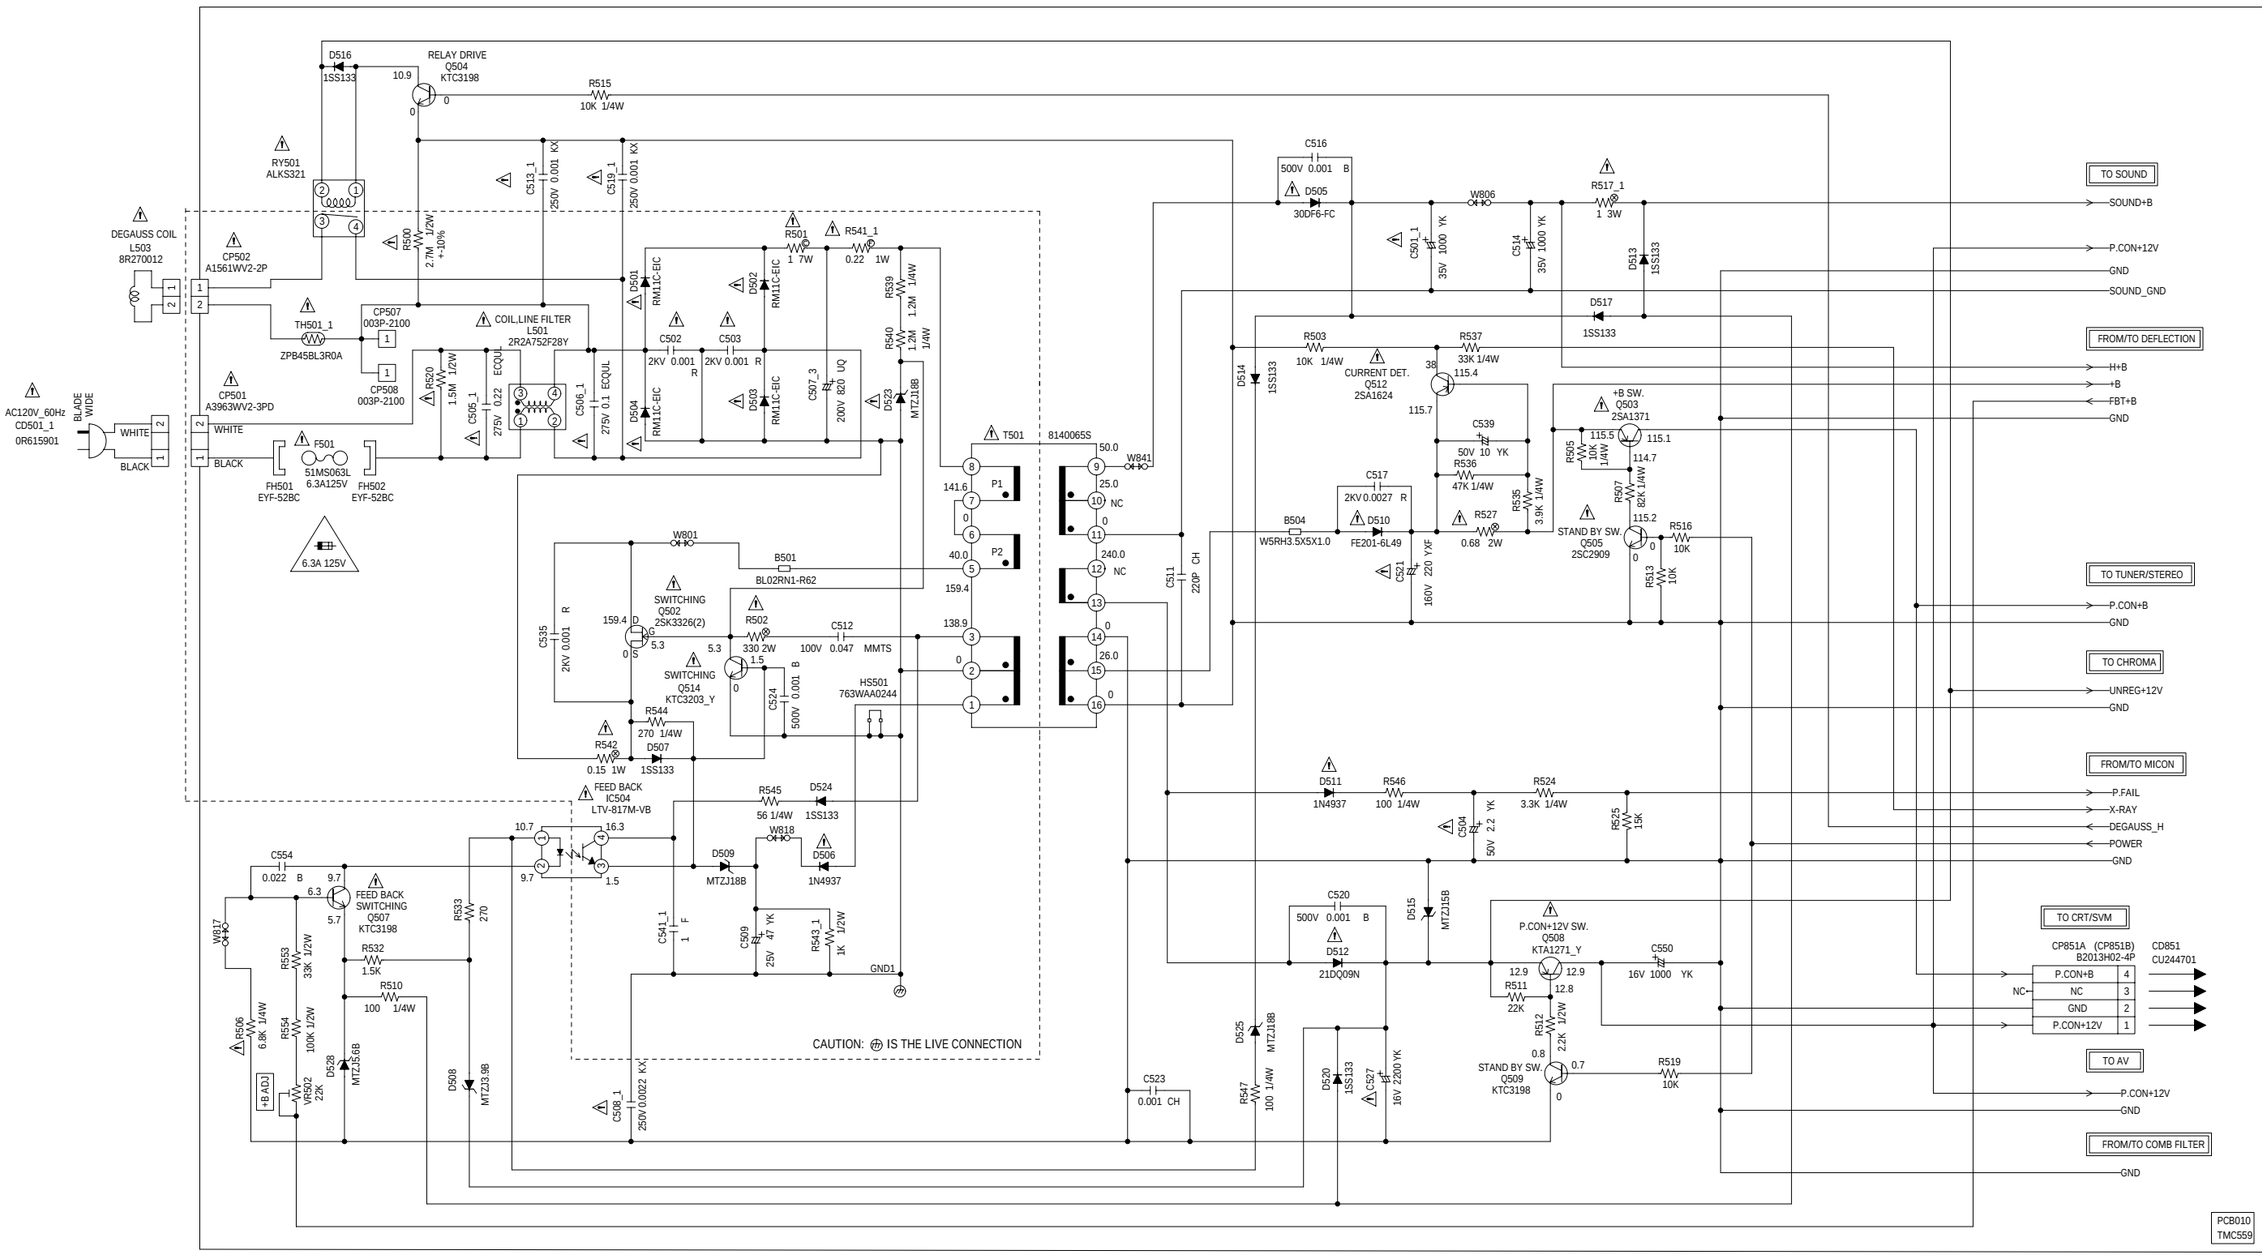

6.3A 125V

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501)

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTOLISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V(F501)

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

SOUND SCHEMATIC DIAGRAM
(MAIN PCB)

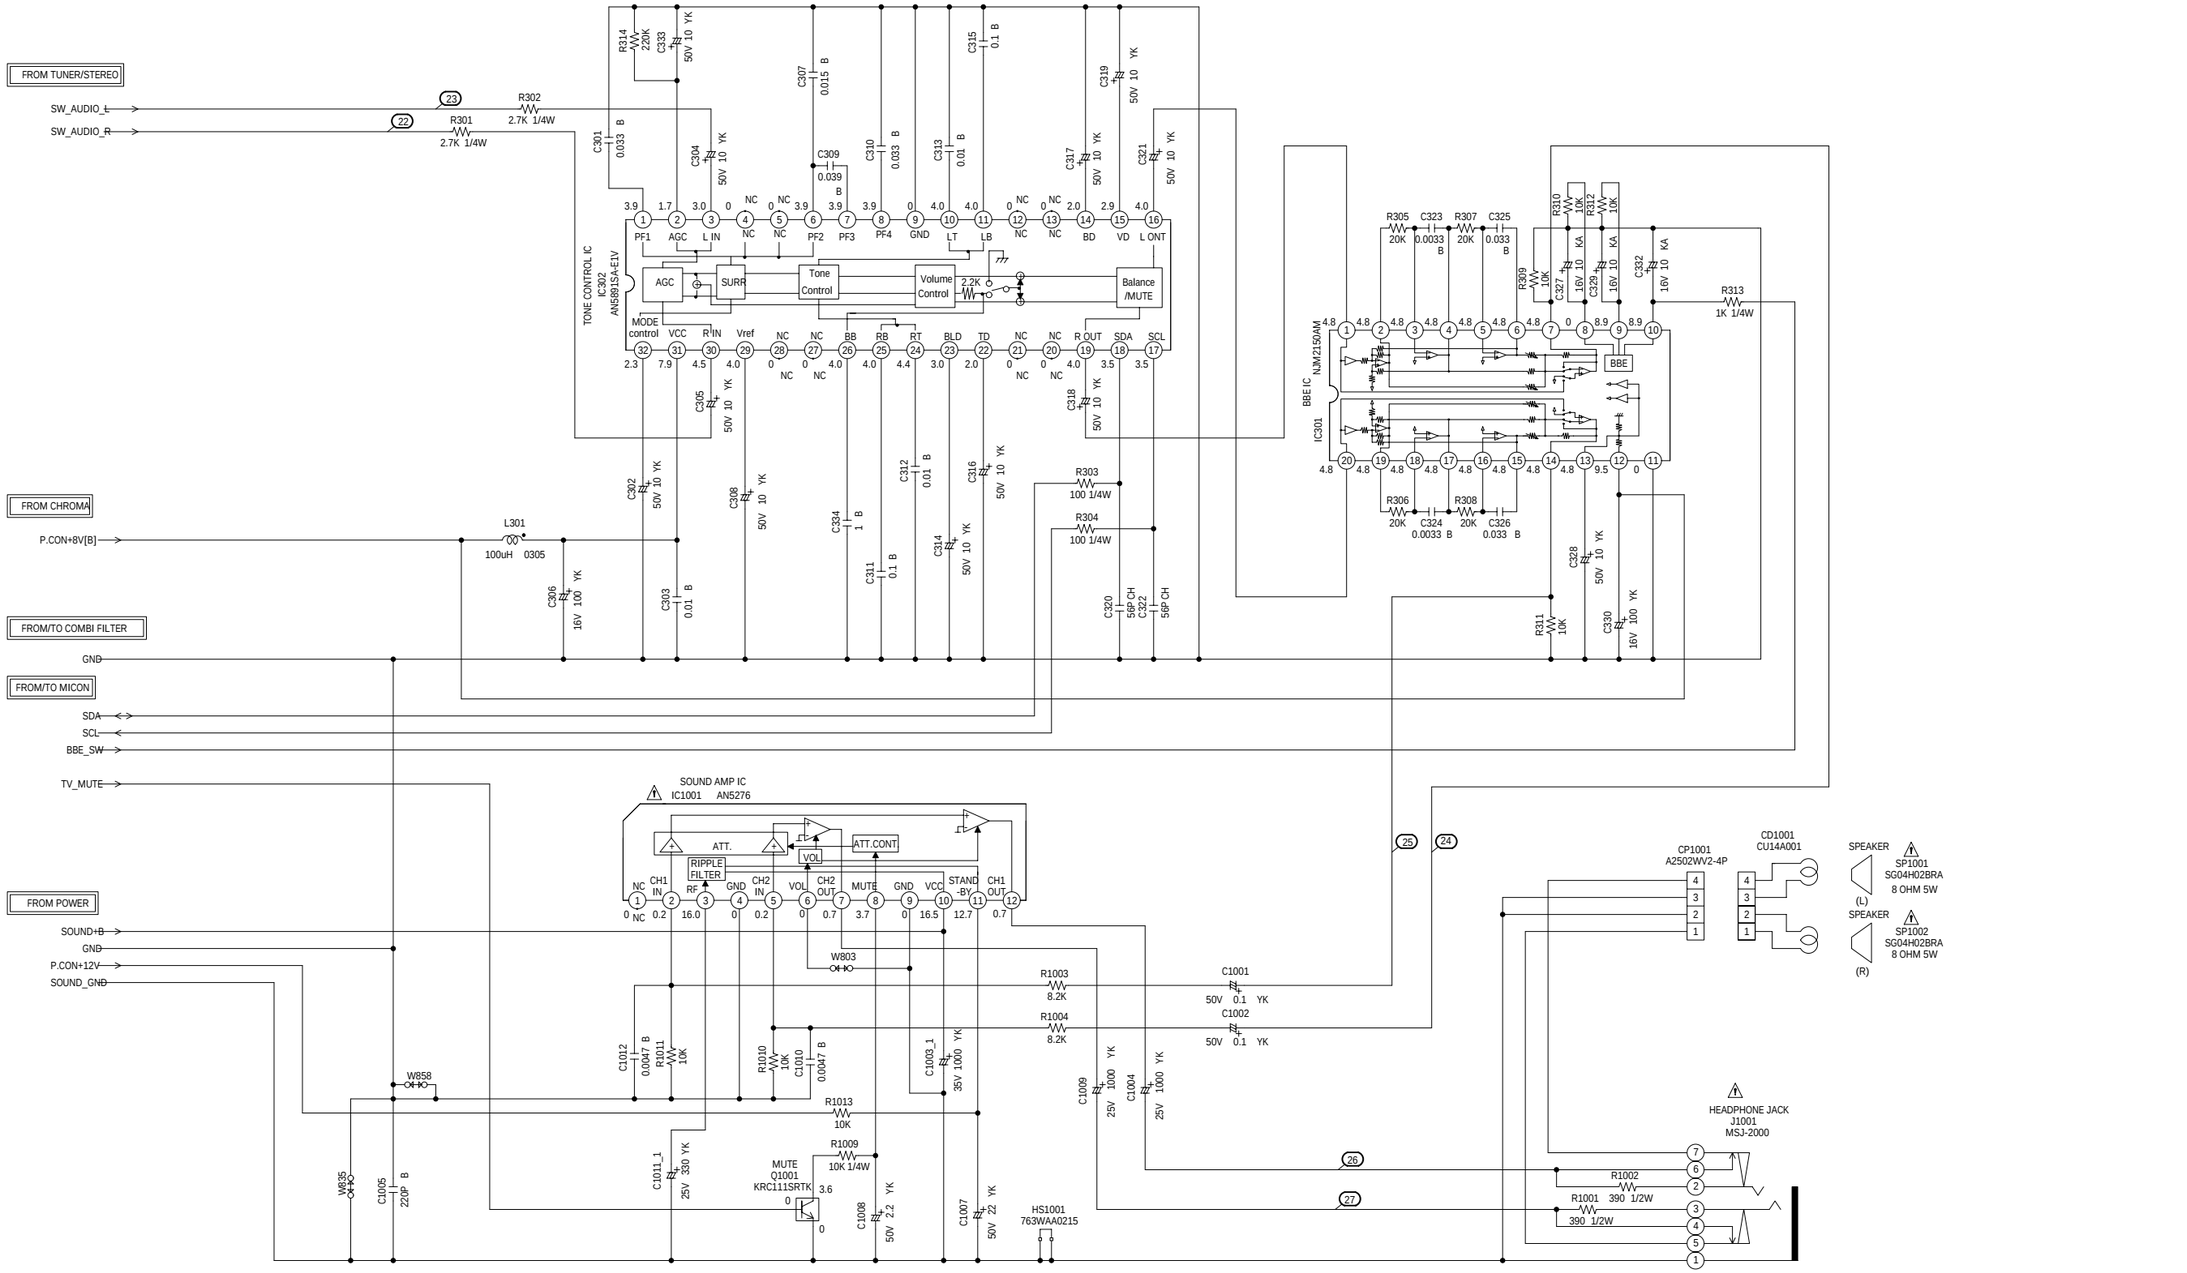

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: DIGITAL TRANSISTOR

TUNER/STEREO SCHEMATIC DIAGRAM

(MAIN PCB)

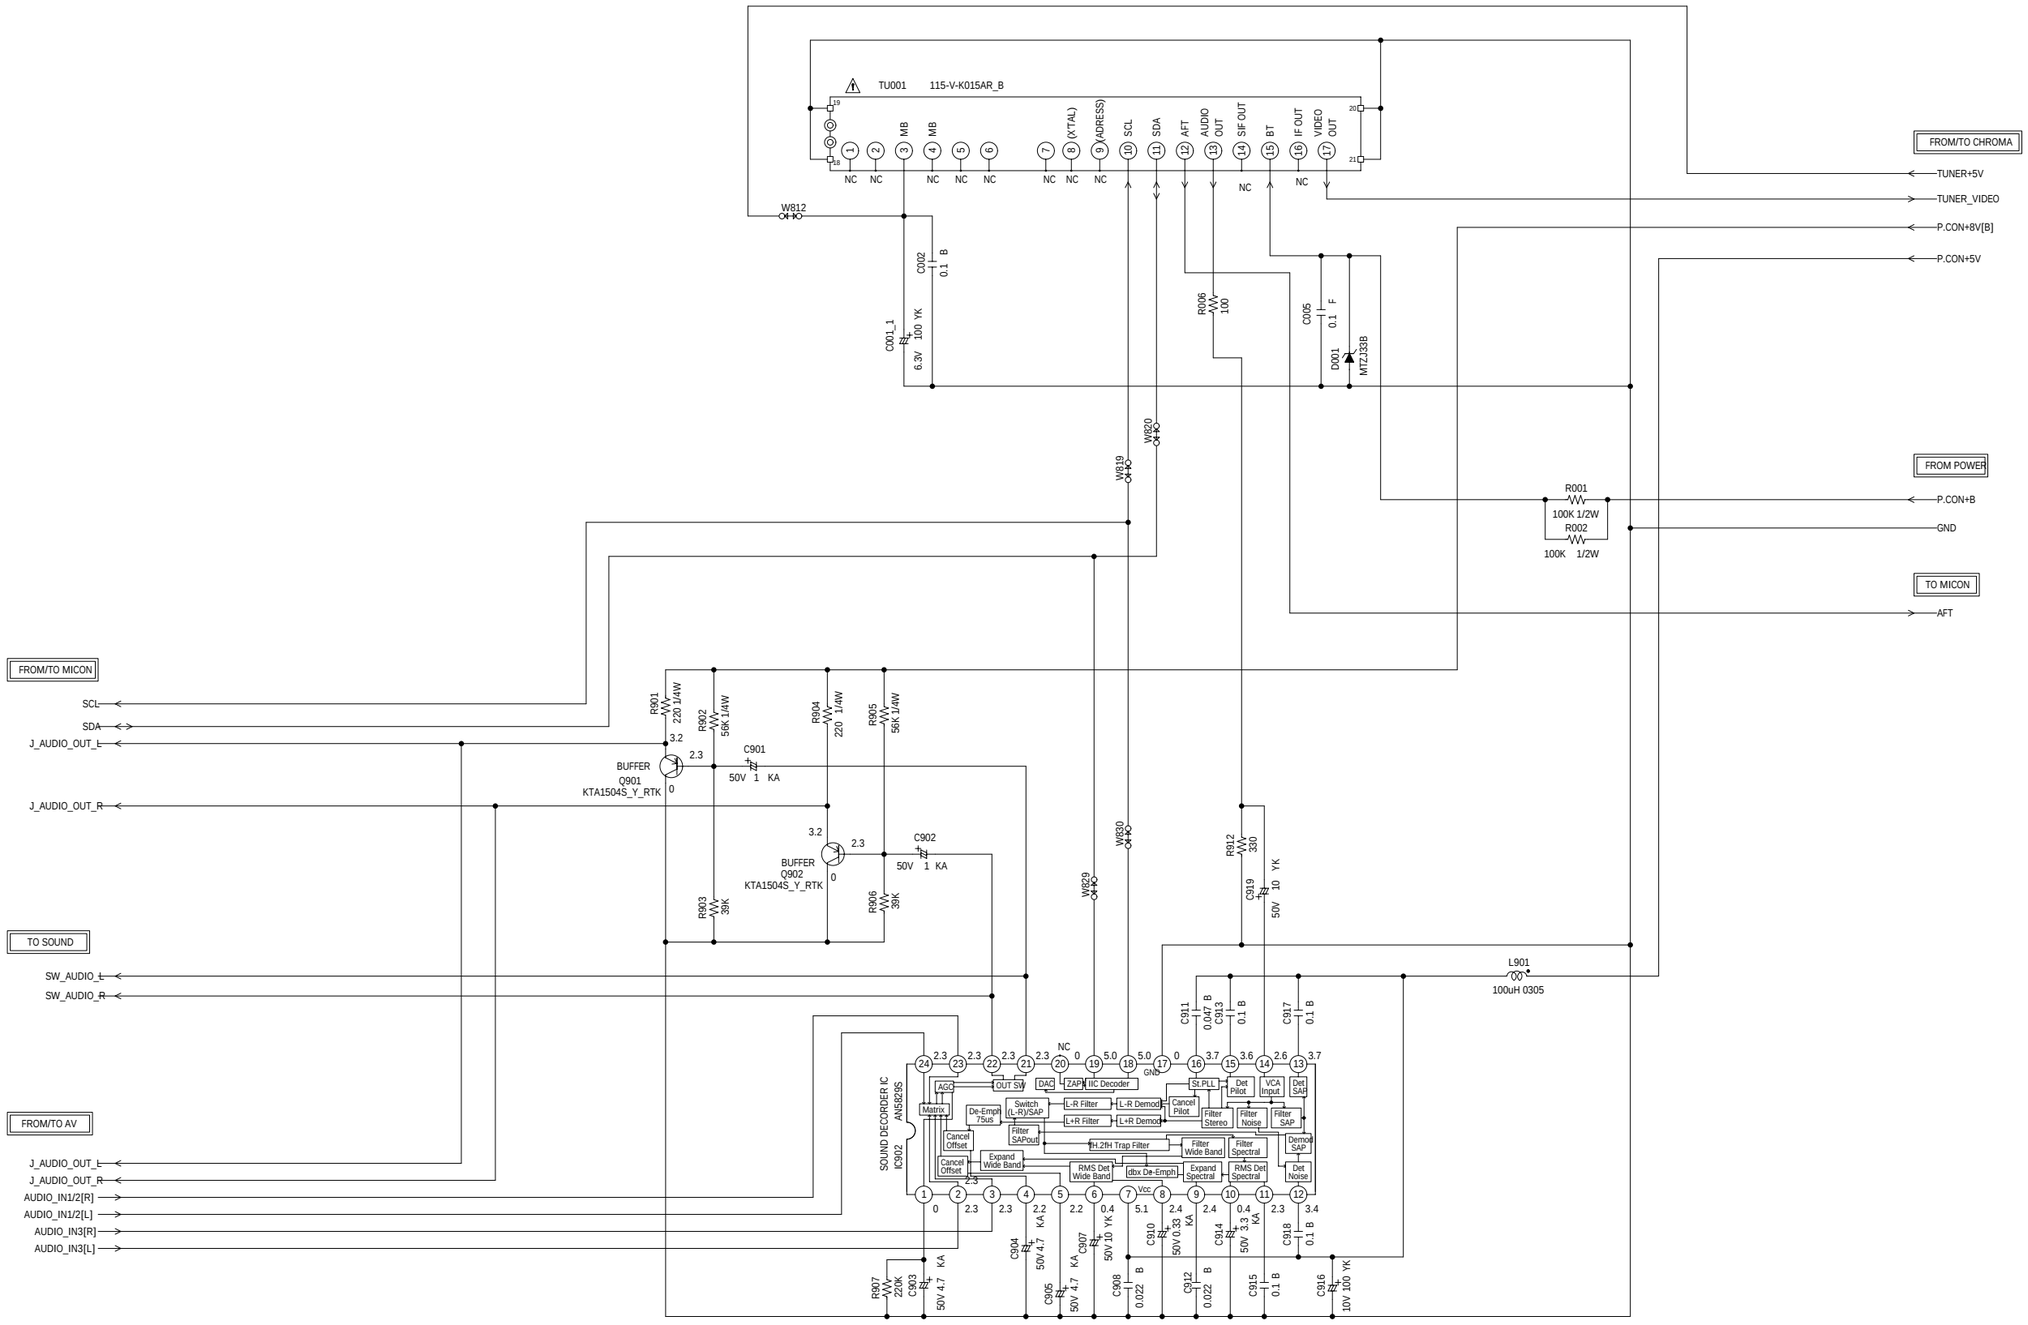

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

AV SCHEMATIC DIAGRAM
(MAIN PCB)

FROM/TO CHROMA

V_IN[YUV]
U_IN[YUV]
Y_IN[YUV]

VIDEO_OUT
VIDEO_IN2
VIDEO_IN1
VIDEO_IN3

YUV_IN(REAR)
J704
MSP-213V1-652_PBSN

28
29

R725 75
D701 MTZJ12B
D702 MTZJ12B
R730 75
D703 MTZJ12B
R736 75

A/V_OUT(REAR)
J708
MSP-213V2-432_PBSN

C707 16V 10 KA
R704 1K
C711 16V 10 KA
R708 1K

R702 220 1/4W
C708 16V 100 YK
R705 3.3K
R709 270
C710 16V 47 KANP
R706 3.3K
4.6
5.2
0
BUFFER
Q709
KTA1504S_Y_RTK
R703 2.2K

0.1
R711 1K
0.2
MUTE
Q711
KTC3875S_Y_RTK
0
R710 1K 1/4W
0.1
0.2
MUTE
Q712
KTC3875S_Y_RTK
0

C728 16V 470 YK
R721 68

LINE2(REAR)
J703
MSP-213V2-432_PBSN

C727 1 B
C724 1 B
R734 1K
R728 1K

R727 75
D705 MTZJ12B
C737 0.0056 B
C735 0.0056 B

LINE1(REAR)
J701
MSP-213V2-432_PBSN

C725 1 B
C722 1 B
R733 1K
R726 1K

R729 75
D704 MTZJ12B
C738 0.0056 B
C736 0.0056 B

S-JACK
J702
YKF51-5503

C733 16V 22 KA
R739 75
C734 0.1 B
R735 75
D709 MTZJ6.2B

FROM/TO TUNER/STEREO

J_AUDIO_OUT_R
J_AUDIO_OUT_L

AUDIO_IN1/2[R]
AUDIO_IN1/2[L]
AUDIO_IN3[L]
AUDIO_IN3[R]

C702 16V 10 KA
C701 16V 10 KA

AUDIO SW(R) IC
IC701
MM1501XNRE

R701 560 1/4W
C705 16V 100 YK
C706 0.1 F

0 SW1 Vin1 4.5
3.7 V.OUT GND 0
12.7 Vcc Vin2 4.5

AUDIO SW(L) IC
IC702
MM1501XNRE

0 SW1 Vin1 4.5
3.7 V.OUT GND 0
12.7 Vcc Vin2 4.5

FROM/TO MICON

EXT_MUTE
AUDIO_SW
S_IN

TO COMB FILTER

S_VIDEO_IN[Y]
S_VIDEO_IN[C]

FRONT-VIDEO
J705
HTJ-032-03AY

FRONT-AUDIO.L
J706
HTJ-032-03AW

FRONT-AUDIO.R
J707
HTJ-032-03AR

R724 75
D706 MTZJ12B

C719 1 B
R745 1K
LINE3_A_IN_L

C741 0.0056 B

C720 1 B
R746 1K
LINE3_A_IN_R

C742 0.0056 B

FROM POWER

P.CON+12V
GND

PCB010
TMC559

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

COMB FILTER SCHEMATIC DIAGRAM
(MAIN PCB)

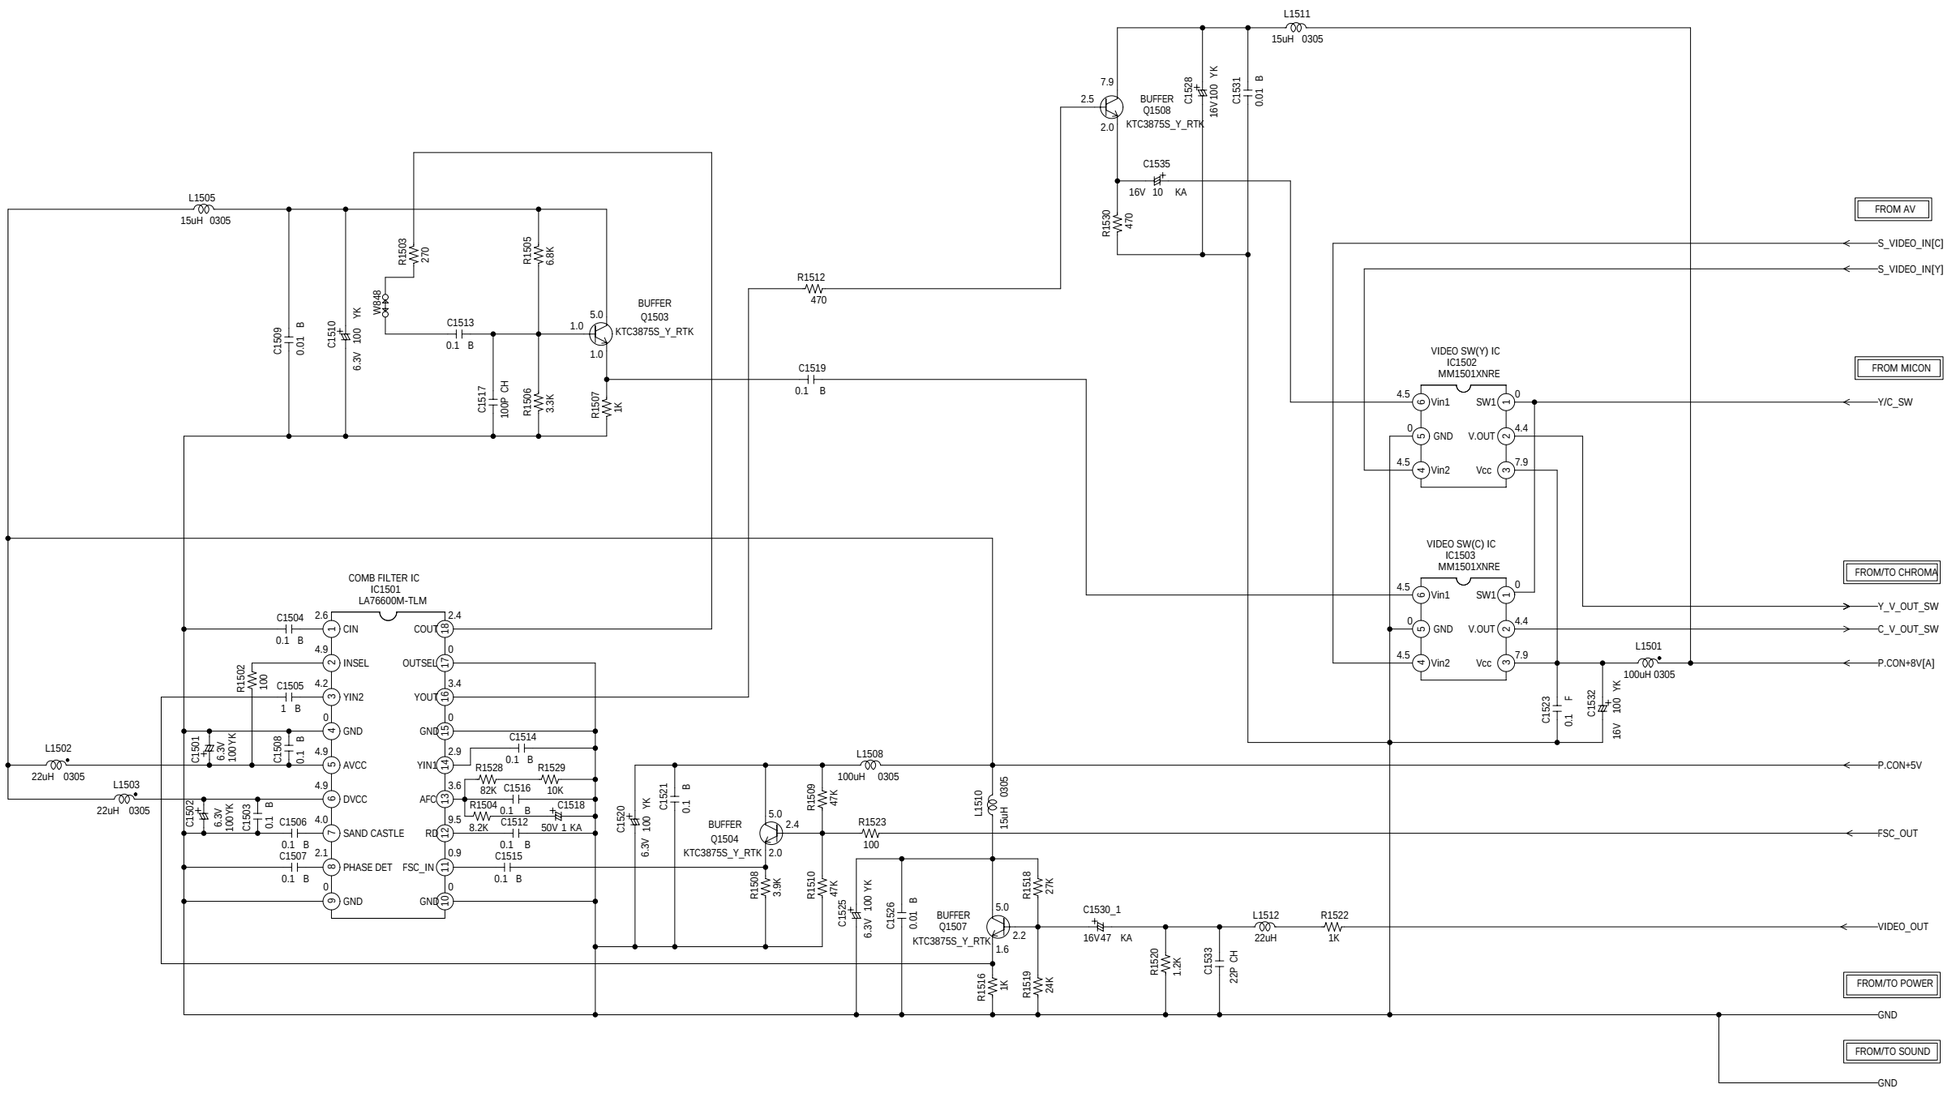

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CRT/SVM SCHEMATIC DIAGRAM (CRT PCB)

CRT BLOCK

FROM CHROMA
CP802B (CP802A)
A2001WV2-7P

1	P.CON+8V
2	GND
3	R.OUT
4	G.OUT
5	B.OUT
6	CLAMP_OFF
7	VM COIL

W821 W822 W823 W820 W808 W809 W807 W812 W815 W810 W805 W802

C813_1 0.22 TF

R813 220 1/4W
R828 2.7K 1/4W
RED AMP Q801 KTC4217
D801 1SS133
RED AMP Q810 KTC3199_Y
D807 1SS133
R810 1.8K 1/4W
C804 470P CH
R817 330 1/4W
R818 82 1/4W
TP804 R808 15K 2W L802 150uH 37 123.5 7.8 7.3 3.0 2.4

R814 220 1/4W
R829 2.7K 1/4W
GREEN AMP Q802 KTC4217
D802 1SS133
GREEN AMP Q811 KTC3199_Y
D808 1SS133
R812 1.8K 1/4W
C805 470P CH
R819 330 1/4W
R820 82 1/4W
TP805 R806 15K 2W L803 150uH 38 123.9 7.8 7.3 3.0 2.4
J801 CVT3275-5101
582.0 121.0 117.0 119.0 6.2

L801 100uH
C809 250V 2.2 YK
TP806 R808 15K 2W L804 150uH 39
R830 2.7K 1/4W
BLUE AMP Q803 KTC4217
D803 1SS133
BLUE AMP Q812 KTC3199_Y
D809 1SS133
R815 220 1/4W
R809 100 1/4W
R811 1.8K 1/4W
C806 680P CH
R821 330 1/4W
R822 82 1/4W
C808 2KV 0.0022 B
R832 22 1/2W
C821_1 100P CH
119.7 7.8 7.3 3.1 2.5

FROM DEFLECTION
CP801B (CP801A)
A2001WV2-5P

5	HEATER
4	GND
3	NC
2	NC
1	180V

CP803 (CD803)
A2301WV2-3P

3	GND
2	GND
1	GND

FOCUS

CP804
005P-2100

1	SCREEN

SVM BLOCK

PCB110
TCA391

FROM POWER
CP851B (CP851A)
A2001WV2-4P

4	P.CON+B
3	NC
2	GND
1	P.CON+12V

R855 330 1/2W
W806 W810
C852 16V 47 YK
C854 16V 10 YK
C853 16V 47 YK

R872 1.2K 1/4W
R870 1.5K 1/4W
D855 1SS133
R877 68 1/2W
C862_1 16V 47 YK
R879 2.7 1/2W

R856 1K 1/4W
R869 2.7K 1/4W
R864 39K 1/4W
SWITCHING Q855 KTC3198
SWTCHING Q856 KTC3198
SWITCHING Q858 2SA1837
B853 W5RH3.5X5X1.0
C865 500V 150P B
R881 220 2W
FROM/TO VM
CP852 (CP852B) A2001WV2-3P
VM1 1
NC 2
VM2 3

BUFFER Q854 KTC3198
AMP Q852 KTC3198
AMP Q853 2SC752(G)(TM)_Y
R854 33K 1/4W
R861 33K 1/4W
R863 3.9K 1/4W
C857 0.001 B
D852 1SS133
R853 22K 1/4W
C856 0.01 B
R858 100 1/4W
R857 470 1/2W
C855 560P CH
R860 33 1/4W
R862 3.9K 1/4W
R865 56K 1/4W

R868 82 1/4W
C860 500V 0.0047 B
R867 10 1/2W
C858 100P CH
D853 1SS133
D854 1SS133
R873 68K 1/4W
B851 W5RH3.5X5X1.0
D858 10EL52N
R876 12K 1/4W
R874 68K 1/4W
B852 W5RH3.5X5X1.0
D857 10EL52N
SWTCHING Q857 KTA1266
SWTCHING Q859 2SC4793
R869 82 1/4W
C861 500V 0.0047 B
R871 1.5K 1/4W
C859 100P CH
R875 1.2K 1/4W
D856 1SS133
HS851 763WSA0018
W811
R878 68 1/2W
R880 2.7 1/2W
C863_1 16V 47 YK
C864 16V 10 YK
R866 2.2K 1/4W

(VM COIL PCB)

PCB060
TEAA93
FROM/TO CRT/SVM
CP852B (CP852) B2013H02-3P
TO VM COIL
S851
S852
CD852_1 CU232001

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

WAVEFORMS

MICON

100µs
1.0V

(1)

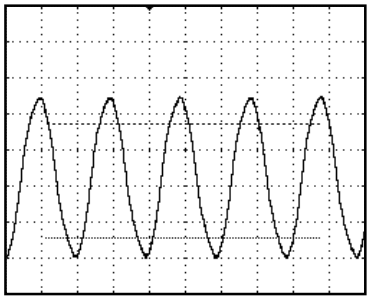

5µs
1.0V

(2)

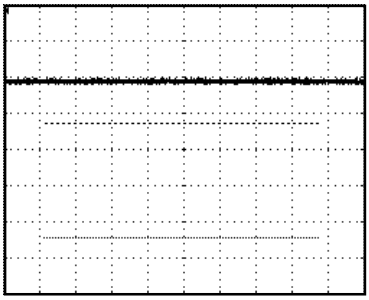

50µs
1.0V

(3)

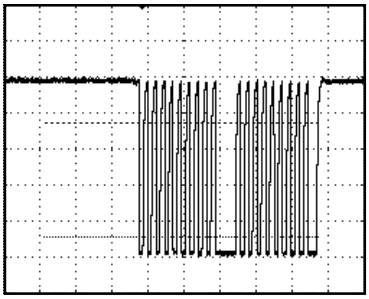

50µs
1.0V

(4)

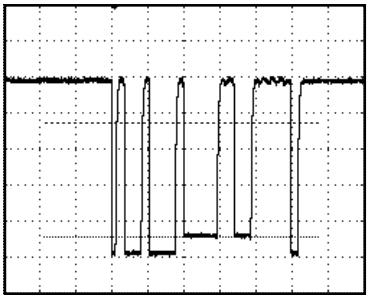

5ms
5.0V

(17)

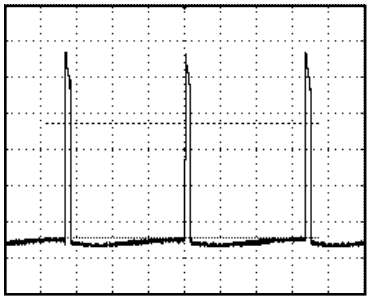

5ms
10V

(18)

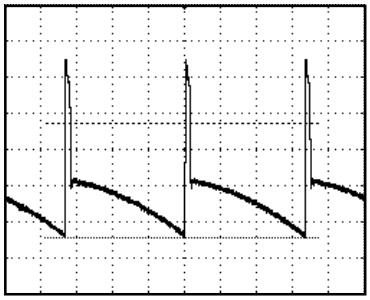

20µs
50V

(19)

20µs
2.0V

(20)

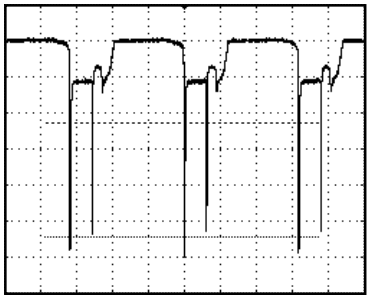

SOUND

1ms
50mV

(22)

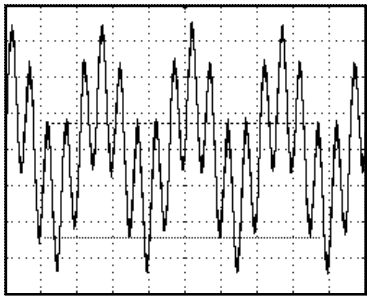

1ms
200mV

(23)

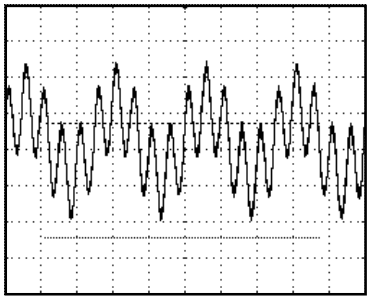

1ms
100mV

(24)

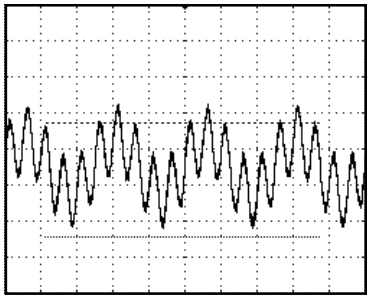

1ms
100mV

(25)

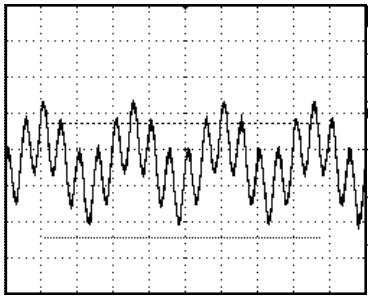

DEFLECTION

5ms
200mV

(16)

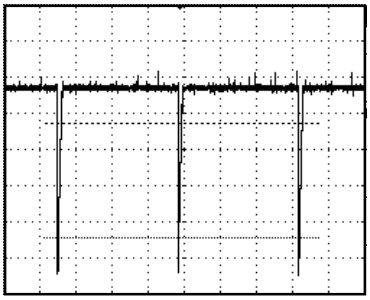

20µs
200V

(21)

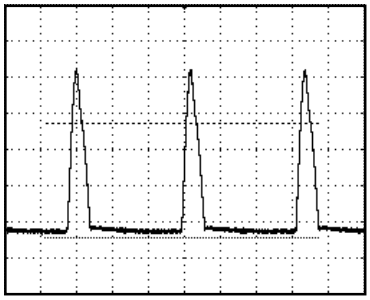

1ms
5.0V

(26)

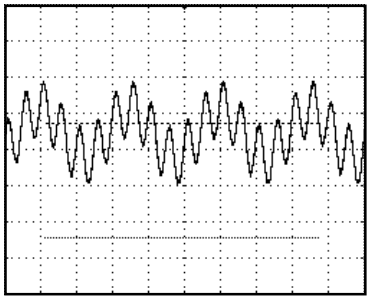

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

1ms
5.0V

(27)

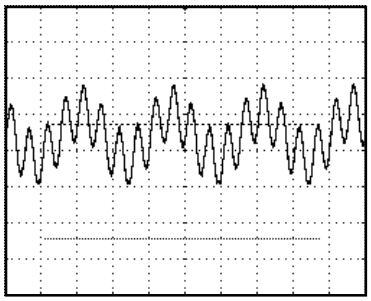

20µs
50V

(39)

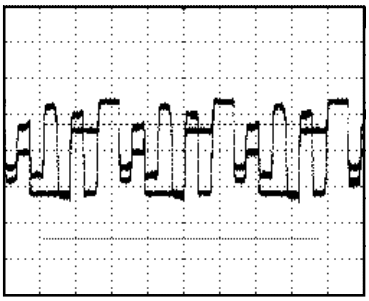

AV

20µs
200mV

(28)

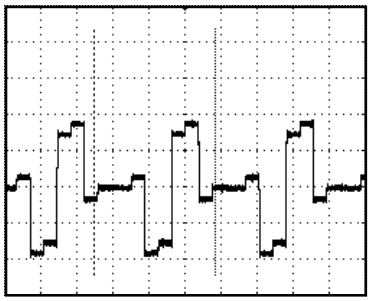

20µs
200mV

(29)

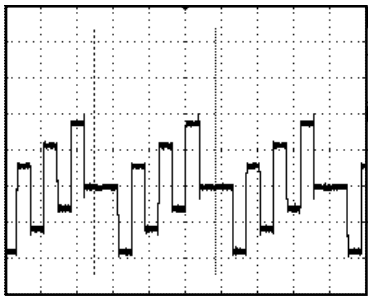

CRT/SVM

20µs
50V

(37)

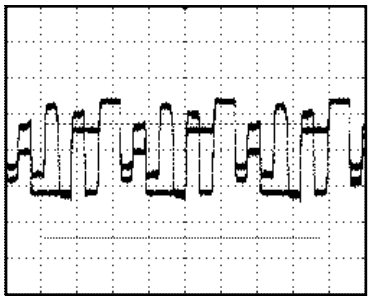

20µs
50V

(38)

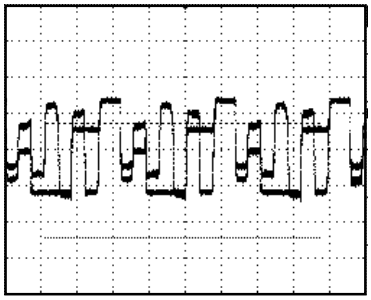

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

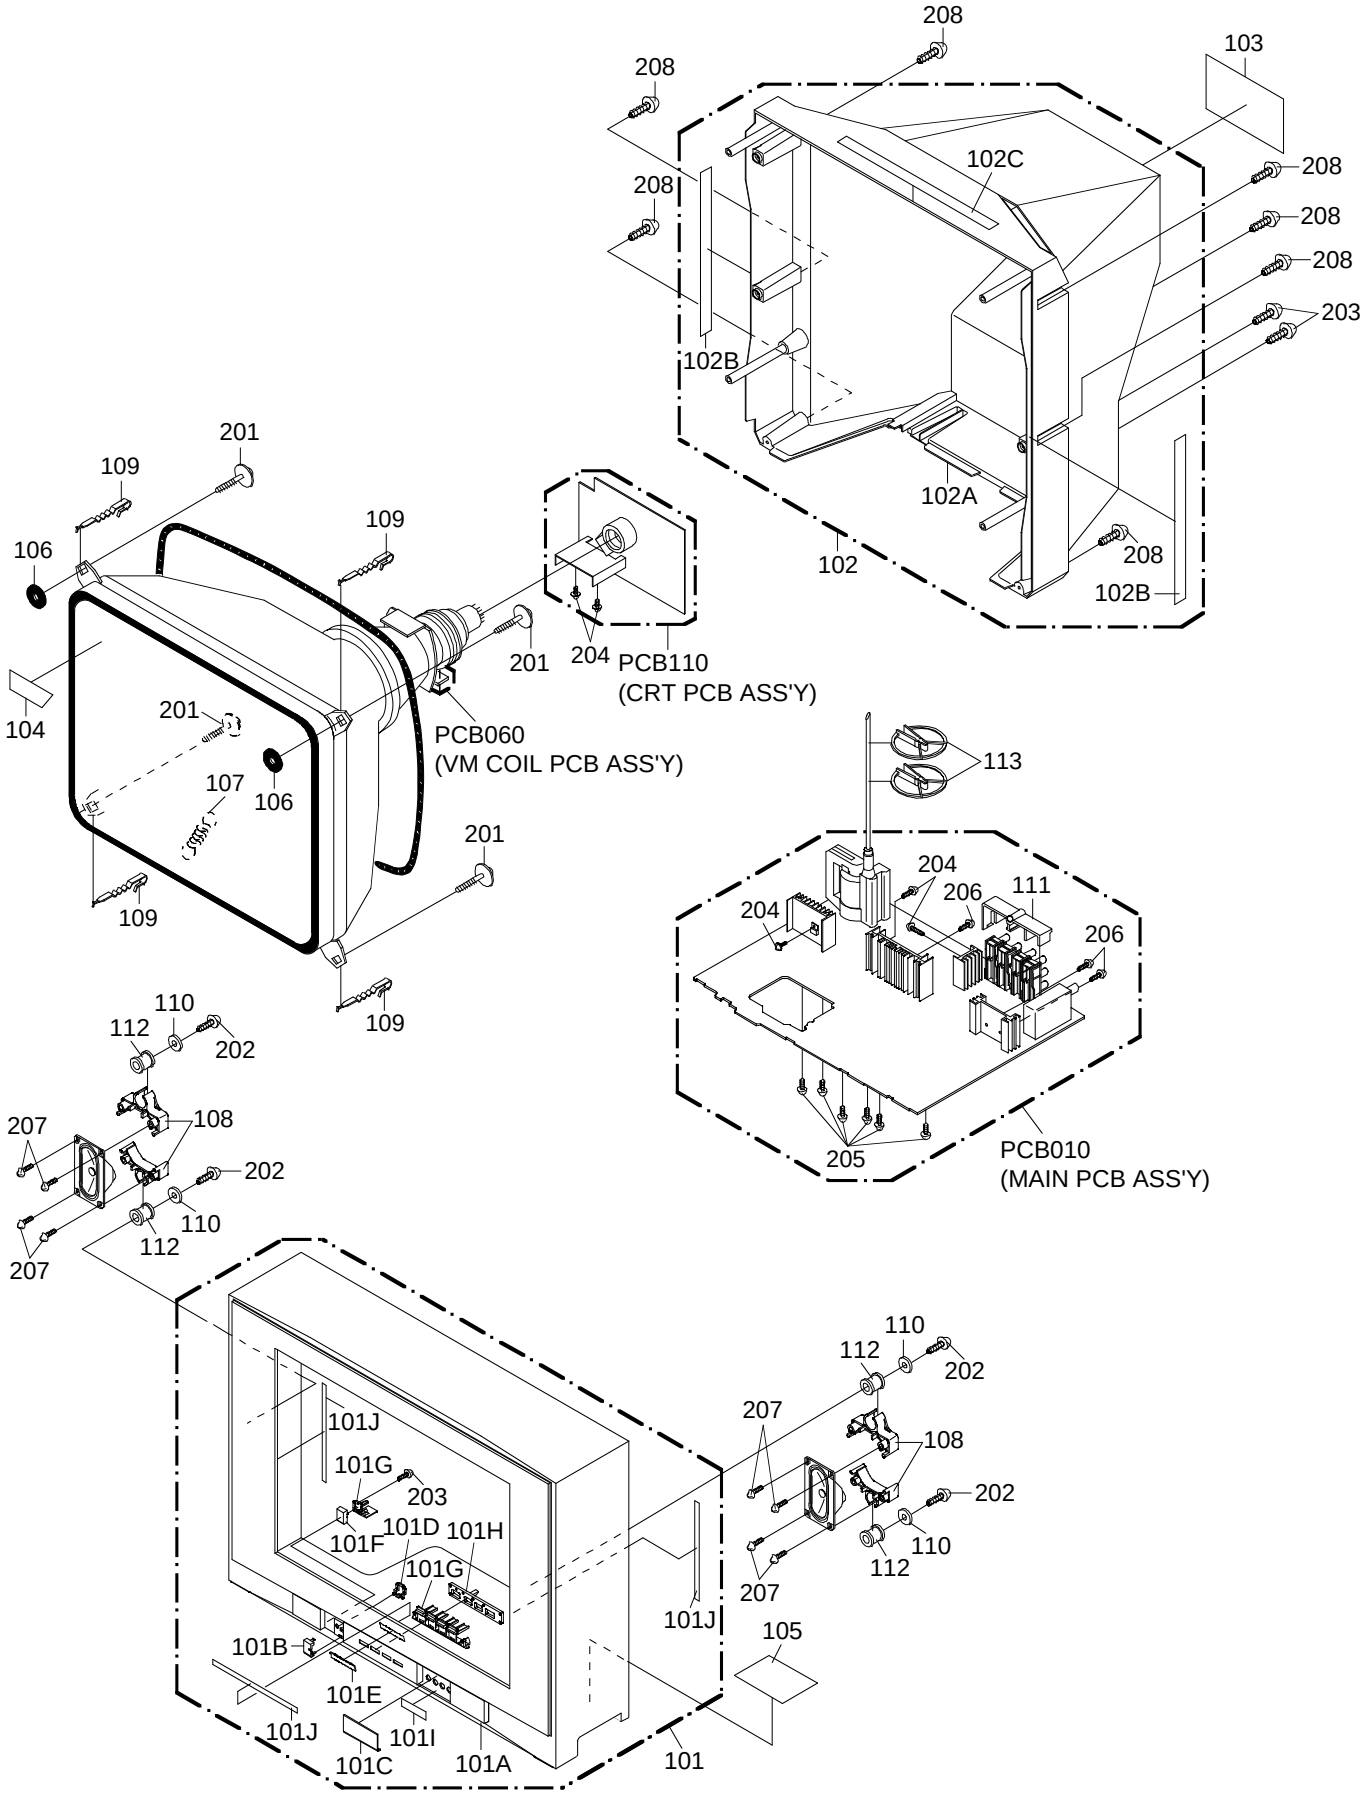

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AD302316	A3N101A720	CABINET,FRONT ASSY	
101A	AD302317	701WPJC130	CABINET,FRONT	
101B	AD302318	711WPA0189	PLATE,FRONT	
101C	AE001102	712WPBA050	DOOR	
101D	AD302320	713WPA0279	GLASS,LED	
101E	AD302321	7235490037	BADGE,BRAND	
101F	AD302322	735WPJA774	BUTTON,POWER	
101G	AD302323	735WPA0754	BUTTON,FRAME	
101H	AD302324	735WPA0755	STOPPER,BUTTON	
101I	AE001105	723549A015	AV LABEL	
101J	AE000723	800WQ0A008	FELT SHEET	
102	AD302325	A3N101A740	CABINET,BACK ASSY	
102A	AE001106	702WPA0994	CABINET,BACK	
102B	AD301894	800WQ0A020	FELT SHEET	
102C	AD301895	800WQ00055	FELT SHEET	
103	AD302326	722549A171	SHEET,RATING	
104	AD302327	723000C171	POP LABEL	
105	AD301624	724000A002	SHEET,CSA	
106	AE001107	800WR0A026	SHEET,CRT SUPPORT (D) (FOR USA ONLY)	
107	AD300759	741WUA0021	SPRING,EARTH	
108	AD302310	761WPA0279	HOLDER,SPEAKER	
109	BZ710259	762WPA0011	HOLDER,CRT WIRE	
110	AD300519	82A40B0104	FLAT WASHER	
111	AD301616	761WPA0263	HOLDER,JACK	
112	AD300518	801WR00001	DAMPER,SPEAKER	
113	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
201	AD302384	8141H60D54	SCREW,TAP TITE(P) GW22	6x45
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
207	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
208	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
---	AE001108	723000C200	SHEET,BAR CODE (FOR USA ONLY)	
---	AD300432	791WHA0092	LAMIFILM,BAG	
---	AD302385	792WHA0460	PACKAGE,TOP	
---	AD302386	792WHA0461	PACKAGE,BOTTOM	
---	AD302330	793WCDB659	GIFT BOX	
---	AD302331	A3N101N975	INSTRUCTION BOOK KIT	
---	AD300022	J3I70417	REGISTRATION CARD	
---	AD300023	J3I70436	ESP CARD	
---	AD302332	J3N10101A	INSTRUCTION BOOK	
---	AD301213	JA4UD300	POLYBAG,INSTRUCTION(RED CAUTION)	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description		
		RESISTORS			
⚠R410	AD301344	R3X18A151J	R,METAL OXIDE	150 OHM 2W	
⚠R426	BZ210030	R4X5T4472F	R,METAL	4.7K OHM 1/4W	
⚠R434	BZ210259	R5Y2CF1R8J	R,CEMENT	1.8 OHM 10W	
⚠R436	BZ210023	R4X5T4183F	R,METAL	18K OHM 1/4W	
⚠R438	BZ210169	R6358A4R7J	R,FUSE	4.7 OHM 2W	
⚠R439	AE000676	R3K181102J	R,METAL	1K OHM 1W	
⚠R441	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W	
⚠R452	AD301385	R3X18A391J	R,METAL OXIDE	390 OHM 2W	
⚠R459	AD301595	R65582010J	R,FUSE	1 OHM 1/2W	
⚠R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W	
⚠R501	AD301596	R5X2AE010J	R,CEMENT	1 OHM 7W	
⚠R502	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W	
⚠R506	BZ210162	R002T4682J	RC	6.8K OHM 1/4W	
⚠R517	BZ210191	R3X28B010J	R,METAL	1 OHM 3W	
⚠R527	BZ210149	R3X18AR68J	R,METAL OXIDE	0.68 OHM 2W	
⚠R541	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W	
R542	AD301017	R3X181R15J	R,METAL OXIDE	0.15 OHM 1W	
⚠R602	AD301975	R3X28B120J	R,METAL OXIDE	12 OHM 3W	
⚠R649	AD301975	R3X28B120J	R,METAL OXIDE	12 OHM 3W	
⚠R804	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R806	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R808	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
R832	AE000901	R00202220J	RC	22 OHM 1/2W	
⚠R855	AD301019	R65582331J	R,FUSE	330 OHM 1/2W	
⚠R881	BZ210087	R3X18A221J	R,METAL OXIDE	220 OHM 2W	
		CAPACITORS			
C408	BZ110032	E5EZF3102M	CE	1000 UF 25V	
C412	BZ110060	P4N8FJ222H	CMPP	0.0022UF 1.25KV	
C413	AD301977	E0ELF4102M	CE	1000 UF 35V	
C418	BZ110136	P4J7F3394J	CMPP	0.39 UF 250V PMS	
⚠C420	AD301978	P4N8FJ133H	CMPP	0.013 UF 1.25KV	
C421	AD300048	P3N1F5183J	CPP	0.018 UF 630V	
C425	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R	
C426	AD300061	E5EZFD220M	CE	22 UF 250V	
⚠C430	BZ110195	E02LU8220M	CE	22 UF 100V	
C442	AD301601	E53FF56R8M	CE	6.8 UF 50V NP	
C501	AD300067	E02LF4102M	CE	1000 UF 35V	or
	BZ110055	E5EZF4102M	CE	1000 UF 35V	
C502	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R	
C503	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R	
⚠C505	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL	
⚠C506	BZ110035	P2122B104M	CMP	0.1 UF 275V ECQUL	
C507	AE000417	E51DFC821M	CE	820 UF 200V	
⚠C508	AD301108	CD39E0MH3M	CC	0.0022UF 250V	
⚠C513	AD301026	CD39E0M13M	CC	0.001 UF 250V	
C514	AD300067	E02LF4102M	CE	1000 UF 35V	or
	BZ110055	E5EZF4102M	CE	1000 UF 35V	
C517	BZ110213	C03L0R7K3K	CC	0.0027UF 2KV R	
⚠C519	AD301026	CD39E0M13M	CC	0.001 UF 250V	
C521	AD301025	E62NFB221M	CE	220 UF 160V	
C527	BZ110119	E02LF2222M	CE	2200 UF 16V	
C535	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R	
C808	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B	
C1003	AD300067	E02LF4102M	CE	1000 UF 35V	or
	BZ110055	E5EZF4102M	CE	1000 UF 35V	
C1004	BZ110053	E02LF3102M	CE	1000 UF 25V	
C1009	BZ110053	E02LF3102M	CE	1000 UF 25V	
		DIODES			
D001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77	
D104	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D106	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77	
D107	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D108	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D109	BZ410054	0021721150	LED	SLR-342VCT32	
D110	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D113	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77	
D402	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC	
D403	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77	
D404	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77	
D405	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		DIODES		
⚠D406	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D407	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D408	AD302110	D2CF0715L0	DIODE,SILICON	ERD07-15L50
D409	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D410	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
⚠D411	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D414	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D415	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D416	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D417	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D419	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D501	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D502	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D503	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D504	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D505	AD300076	D28F30DF60	DIODE,RECTIFIER	30DF6-FC
D506	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D507	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D508	BZ410064	D97U03R91B	DIODE,ZENER	MTZJ3.9B T-77
D509	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D510	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D511	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D513	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D514	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D515	AD300670	D97U01501B	DIODE,ZENER	MTZJ15B T-77
D516	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D517	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D520	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D523	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D524	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D525	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D601	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D602	BZ410058	D97U08R21B	DIODE,ZENER	MTZJ8.2B T-77
D604	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D605	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D606	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D607	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D608	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D701	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D702	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D703	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D704	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D705	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D706	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D709	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D852	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D853	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D854	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D855	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D856	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D857	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
D858	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
		ICS		
IC101	AD301981	I56F07090A	IC	OEC7090A
IC199	AE000902	A3N101A015	IC	S-24C16AFJA-TB-01
IC301	AD300055	I0QF021500	IC	NJM2150AM
IC302	AD301983	I01FF58910	IC	AN5891SA-E1V
IC401	AD300414	I03TD80410	IC	LA78041
⚠IC504	BZ410088	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC601	AD301984	I06FC12830	IC	M61283FP
IC701	AD301988	I0UF015010	IC	MM1501XNRE
IC702	AD301988	I0UF015010	IC	MM1501XNRE
IC902	AD300059	I01FF58290	IC	AN5829S

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		ICS		
IC1001	AD300056	I0FSP52760	IC	AN5276
IC1501	AD301029	I03FE76600	IC	LA76600M-TLM
IC1502	AD301988	I0UF015010	IC	MM1501XNRE
IC1503	AD301988	I0UF015010	IC	MM1501XNRE
		TRANSISTORS		
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
Q405	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q410	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q502	BZ510098	T220033260	FET	2SK3326(2)
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON	KTA1271_Y-AT
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q610	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q613	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
⚠Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
⚠Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
⚠Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON	2SC752(G)(TM)_Y
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON	2SA1837
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON	2SC4793
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q1001	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR	KRC111SRTK
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
		COILS &TRANSFORMERS		
L301	BZ310041	02167F101J	COIL	100 UH
L402	AD300400	022100034A	COIL,LINEARITY	ELH5L4132N
L403	AD301606	02DK000058	COIL,CHOKE	02DK000058
⚠L501	AD301124	029T000101	COIL,LINE FILTER	2R2A752F28Y
⚠L503	AD302360	028R270012	COIL,DEGAUSS	8R270012
L601	AD301989	0216A6330J	COIL	33 UH
L801	BZ310002	021673101K	COIL	100 UH
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH
L804	AD300123	021673151K	COIL	150 UH
L901	BZ310041	02167F101J	COIL	100 UH
L1501	BZ310041	02167F101J	COIL	100 UH
L1502	BZ310039	02167F220J	COIL	22 UH

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		COILS &TRANSFORMERS		
L1503	BZ310039	02167F220J	COIL	22 UH
L1505	AD300613	02167F150J	COIL	15 UH
L1508	BZ310041	02167F101J	COIL	100 UH
L1510	AD300613	02167F150J	COIL	15 UH
L1511	AD300613	02167F150J	COIL	15 UH
L1512	AD301608	0216A6220J	COIL	22 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
⚠T501	AD301355	048140065S	TRANSFORMER,SWITCHING	8140065S
		JACKS		
J701	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK	YKF51-5503
J703	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK	MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK	HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK	HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK	HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
⚠J801	BZ614115	066C130017	SOCKET,CATHODE RAY TUBE	CVT3275-5101
J1001	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
		SWITCHES		
SW101	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
		VARIABLE RESISTORS		
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED	EVNCYAA03BE4
		P.C.BOARD ASSEMBLIES		
PCB010	AE000903	A3N101A010	PCB ASS'Y (FOR USA)	TMC559B
PCB010	AE000906	A3N105A010	PCB ASS'Y (FOR CANADA)	TMC559B
PCB060	AE000904	A3N101A060	PCB ASS'Y	TEAA93B
PCB110	AE000905	A3N101A110	PCB ASS'Y	TCA391B
		MISCELLANEOUS		
B401	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B402	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS	BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
CD501	AD300746	120R615901	CORD,AC BUSH	0R615901
CD801	BZ614457	06CU253901	CORD,CONNECTOR	CU253901
CD802	AD302370	06CU275101	CORD,CONNECTOR	CU275101
CD803	AD300094	06CP83035A	CORD,CONNECTOR	CP83035A
CD851	AD302371	06CU244701	CORD,CONNECTOR	CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR	CU232001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE	173979-7
CP401	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE	A3963WV2-3PD
CP502	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
CD1001	AD302372	06CU14A001	CORD CONNECTOR	CU14A001
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P
CP802A	AD301997	067U007029	WIRE HOLDER	B2013H02-7P
CP802B	BZ614485	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
CP851A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
⚠F501	AD301046	081PC6R305	FUSE	51MS063L

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		MISCELLANEOUS		
⚠FB401	AD302315	043227012F	TRANSFORMER,FLYBACK	3227012F
FH501	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH502	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS101	AD301048	0773071001	REMOTE RECEIVER	RPM7138-H5
⚠RY501	AD300114	0560V20115	RELAY	ALKS321
SP1001	BZ614381	070C546004	SPEAKER	SG04H02BRA
SP1002	BZ614381	070C546004	SPEAKER	SG04H02BRA
⚠TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
TM101	AD302001	076R0GF010	TRANSMITTER	R25-1911
TU001	AE000273	0163300005	RF UNIT	115-V-K015AR_B
V801	AD302375	0985270901	CRT W/DY	A68LXZ696X04
X101	AD302002	100CT8R005	CRYSTAL	HC-49/U-S
X602	AD302003	100CT3R505	CRYSTAL	HC-49/C

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN